


# Phantom<sup>VEO</sup>™ High-Speed Cameras

340, 640, 410, 710, L & S models



ViSiON  
RESEARCH

**AMETEK**<sup>®</sup>  
MATERIALS ANALYSIS DIVISION

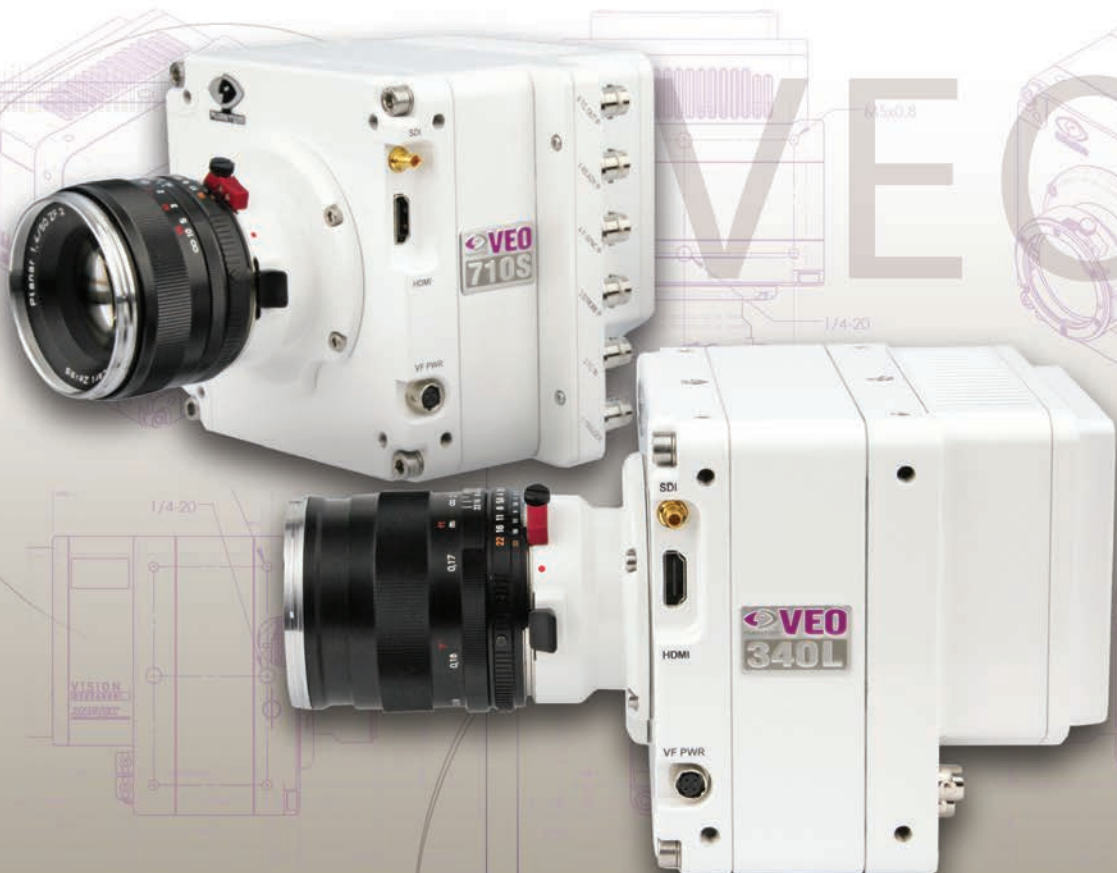

# MANUAL

When it's too fast to see, and too important not to.®

www.phantomhighspeed.com

# Phantom VEO

# MANUAL

100 Dey Road  
Wayne, NJ 07470 USA  
+1.973.696.4500

[www.phantomhighspeed.com](http://www.phantomhighspeed.com)

**AMETEK®**  
MATERIALS ANALYSIS DIVISION

www.phantomhighspeed.com

Written and produced by the Marketing Department at Vision Research.

The contents of this manual may be subject to change without notification.

PN: ZDOC-64109-MA-0001 Rev A  
Last Updated: 10.NOV.2016

# Contents

1	Camera Overview	1
2	Connectors	5
3	Quick Start Guides	9
4	On-Camera Controls and On-Screen Displays	13
5	Working with CFast 2.0 Cards	25
6	Phantom PCC Software: Camera Operation, Download and File Conversion	29
7	Programmable I/O Signal Architecture	43
8	Measurements with PCC	49
9	Accessories	55
10	FAQs & Support	63

# specifications

	VEO 710	VEO 410	VEO 640	VEO 340
Max. Resolution	1280 x 800		2560 x 1600	
FPS @ Max Res	7400 fps	5200 fps	1400 fps	800 fps
Throughput	7Gpx/sec	4Gpx/sec	6Gpx/sec	3Gpx/sec
Sensor Size	25.6 x 16 mm at full resolution (super 35mm)			
Pixel Pitch	20 micron		10 micron	
CAR	64 x 8		128 x 4	
Min. Exposure	1 $\mu$ s standard, 300ns optional on 710 models only			
Straddle Time	400 ns		400 ns	
Native ISO (12232 SAT Method)	Mono: 6400 D Color: 2000 D		Mono: 6400 D Color: 1250 D	
Recommended Exposure Index (E.I)	Mono: 6400 - 40,000; Color: 2000 - 10,000		Mono: 6400 - 40,000; Color: 1250 - 6400	
Memory	18GB, 36GB or 72GB RAM			
Power	16-32 VDC primary power, power supply included. Secondary 12V input on S-models only			
Size/Weight	Approximately 5.0 x 5.0 x 5.0 in (12.7 x 12.7 x 12.7 cm) without lens mount; 5.6 lbs (2.5 kg)			
Operational Temp	-10° - +50° C			
Shock Rating	Rated 30G (standard); 100G without shutter (optional)			
Special features	Sealed enclosure; Interchangeable lens mounts; SDI and HDMI video outputs on all models, Programmable I/O architecture			

	Ethernet	Video	OCC/ Buttons	CFast Media	Programmable I/O	Range Data
'L' style	1 GbE, RJ45	Front 3G SDI Din & HDMI	None	None	2 Ports	None
'S' style	1 GbE, Fischer Port	Same as L w/ additional 3G SDI BNC	Full OCC menu + Trigger & Play buttons	Supports CFast 2.0 cards up to 256G	4 Ports	Yes, Dedicated Fischer port

# 1 | Camera Overview



Phantom VEO 340L and 710S

## Introduction

Phantom VEO high-speed cameras are small, rugged, packed full of features and available in four different performance levels (410, 710, 340 and 640) and two body styles (L and S).

VEO 410 and 710 models use a one-megapixel sensor. At 1280 x 800 the VEO 410 captures over 5,000 frames per second (fps) and the VEO 710 goes over 7,000 fps.

Like all Phantom cameras, the lower the resolution the faster the camera can record. At 720p the VEO 710 reaches 8,000 fps. With the fast option installed the VEO 710 records over 1,000,000 fps at a reduced resolution.

The Phantom VEO 340 and 640 use a four-megapixel sensor. At 2560 x 1600 the VEO 340 records up to 800 fps. The VEO 640 goes over 1,400 fps at full resolution and over 2,500 fps at 1920 x 1080.

## Sensitivity & Exposure Index

VEO cameras use proprietary 12-bit CMOS sensors designed for optimal image quality and light sensitivity. The camera's Exposure index function allows for the effective ISO to be dialed in either on the camera body or in PCC software.

Exposure index (EI) range: VEO 340 & 640 Color 1250 - 6400; Mono 6400 - 40,000 -- VEO 410 & 710 Color 2000 - 10,000; Mono 6400 - 40,000.

## Lens Mounts

Both cameras have a super 35mm field of view at full resolution and are compatible with common SLR lenses when equipped with the standard Nikon or optional Canon EF lens mount. The Canon mount allows for electronic and remote control of aperture and focus. A PL mount and C-mount are also available for VEO cameras.

## Camera Control

All Phantom VEO cameras come with PCC software for ethernet-based setup and control. VEO S-model cameras also have an On-Camera Control (OCC) menu system for use with an attached video monitor. The OCC menu can adjust both basic and advanced camera settings. Capture, Play and Save-to-CFast functions are also available via the camera's OCC menu.

## CFast 2.0 Workflow

VEO S-model cameras are compatible with standard CFast 2.0 cards. CFast cards are non-volatile, hot-swappable recording media and they enable remote, un-tethered recording. The cards must be formatted with the NTFS file system - this can be done either in-camera or in a CFast 2.0 card reader on a PC or Mac.

Once images have been captured in RAM they can be played back immediately, in/out points set and then saved to the CFast card at speeds of approximately 90 MB/second.



## File Formats

Like all Phantom cameras, Phantom VEO utilizes Vision Research's proprietary Cine Raw format. These files are captured in 12-bit and efficiently saved to the CFast 2.0 card in a 10-bit 'packed' format.

Cine Raw files can be viewed and edited in PCC software, where basic motion analysis measurement tools are available. An SDK and file format documentation are available for users who require Phantom Cine file compatibility in independent software.

Cine Raw files are compatible with many of the video industry's top editing programs, or they can be converted to a variety of formats (h264 .mp4, Apple ProRes .mov, .avi, tiff, etc) using software provided with the camera.

## Image Monitoring & Video Outputs

All Phantom VEO camera models have a 3G HD-SDI, HDMI and 12V power output from the side of the camera. These make it easy to use a small on-camera monitor or viewfinder for composing the shot and watching a smooth playback without being tethered to a computer.

VEO S-models have a second 3G HD-SDI BNC port on the back of the camera. The feed from all video outputs is identical and can show either live video or playback.

## Additional Features

**Programmable I/O:** Assign and Define signal parameters. See Programmable I/O section for more info.



**Image-Based Auto-Trigger (IBAT):** Trigger camera from change in image

**Multi-Cine:** Support for up-to 63 partitions

**Burst Mode:** Generate a precise number of frames with every frame sync pulse

**Continuous Recording:** Automatically and continuously save Cines to external storage

# VEO-L

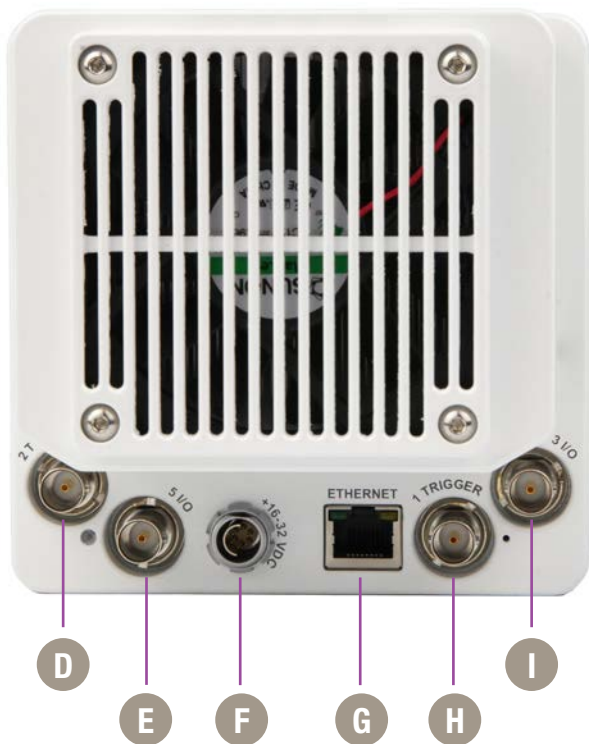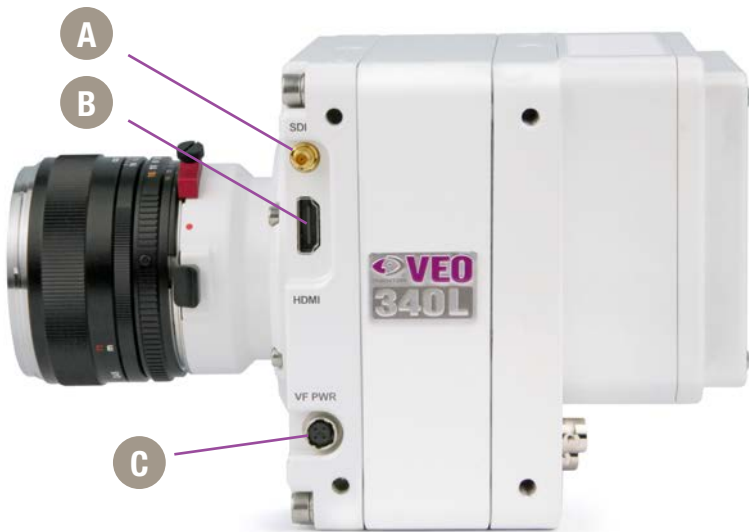

Phantom VEO-L Models - Side and Rear Views

# 2

## Connectors VEO-L Models

<b>SDI</b>	<b>A</b>	Din (mini-bnc) connector outputs SDI video at 1.5G and 3G video rates.
<b>HDMI</b>	<b>B</b>	Standard HDMI connector - outputs identical digital video signal as SDI.
<b>VF PWR</b>	<b>C</b>	4-pin Hirose port. +12V power output for small monitors and viewfinders, rated up to 10W.
<b>2 TC In</b>	<b>D</b>	Timecode-in BNC - fixed port.
<b>5 I/O</b>	<b>E</b>	Programmable I/O BNC port. Port ID = P5 Default signal is Strobe.
<b>+16 - 32 VDC</b>	<b>F</b>	6-pin Fischer port for main power input, accepts +16 - 32 VDC.
<b>Ethernet</b>	<b>G</b>	RJ45 port for Gb Ethernet, for control and data transfer.
<b>1 Trigger</b>	<b>H</b>	Trigger-in BNC - fixed port.
<b>3 I/O</b>	<b>I</b>	Programmable I/O BNC port. Port ID = P3 Default signal is F-Sync.





Assign and define **Programmable I/O** ports using PCC.

Instructions can be found in the Programmable I/O section of this manual.



A complete cable connector reference and pin-out guide is available in the last section of this manual

# VEO-S

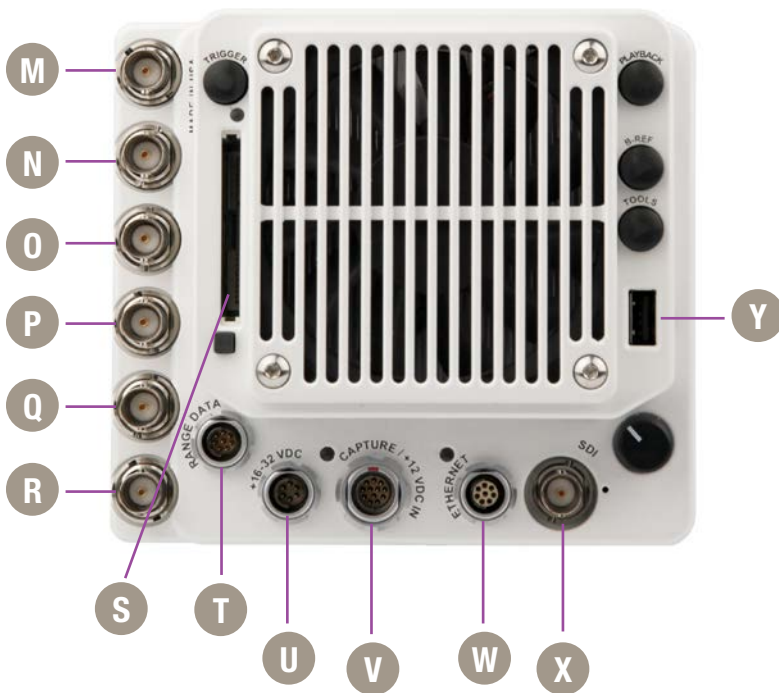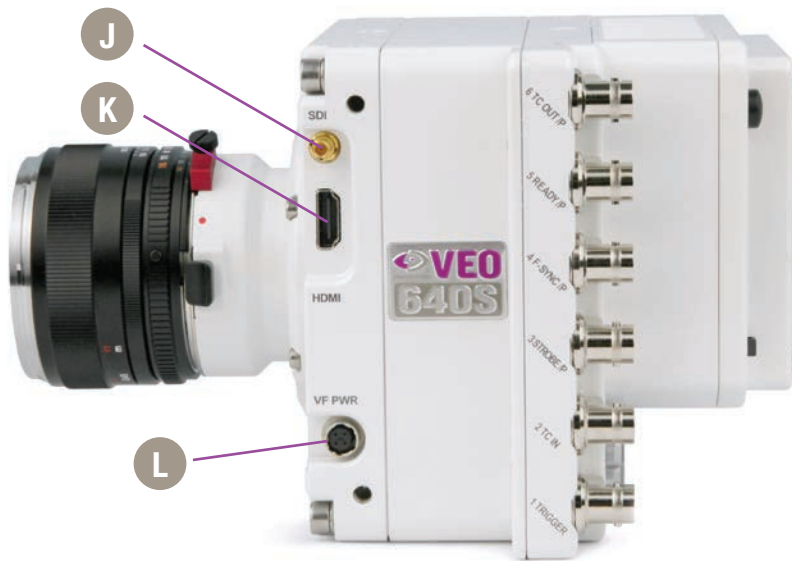

Phantom VEO-S Models - Side and Rear Views

# VEO-S Models

<b>SDI</b>	<b>J</b>	Din (mini-bnc) connector outputs SDI video at 1.5G and 3G video rates.
<b>HDMI</b>	<b>K</b>	HDMI video output.
<b>VF PWR</b>	<b>L</b>	4-pin Hirose port. +12V power output for small monitors and viewfinders, rated up to 10W.
<b>6 TC Out /P</b>	<b>M</b>	Programmable I/O BNC port. Port ID = P6 Default signal is Timecode Out.
<b>5 Ready /P</b>	<b>N</b>	Programmable I/O BNC port. Port ID = P5 Default signal is Ready.
<b>4 F-Sync /P</b>	<b>O</b>	Programmable I/O BNC port. Port ID = P4 Default signal is F-Sync.
<b>3 Strobe /P</b>	<b>P</b>	Programmable I/O BNC port. Port ID = P3 Default signal is Strobe.
<b>2 TC In</b>	<b>Q</b>	Timecode-in BNC - fixed port.
<b>1 Trigger</b>	<b>R</b>	Trigger-in BNC - fixed port.
<b>CFast Port</b>	<b>S</b>	CFast 2.0 Card slot .
<b>Range Data</b>	<b>T</b>	8-pin Fischer port for Range data input.
<b>+16 - 32 VDC</b>	<b>U</b>	6-pin Fischer port for main power input, accepts +16 - 32 VDC.
<b>Capture / +12VDC In</b>	<b>V</b>	12-pin Fischer port for capture cable or mini-bob accessories, or use as a secondary +12V power input for battery adapters.
<b>Ethernet</b>	<b>W</b>	8-pin Fischer port for Gb Ethernet, for control and data transfer.
<b>SDI</b>	<b>X</b>	BNC port for 1.5G and 3G SDI video output.
<b>USB Port</b>	<b>Y</b>	USB port - Not active initially.



This section shows basic setup and camera control using Phantom PCC software. More in depth instructions can be found later in this manual. Please note there are other methods of camera control including on-camera controls, the Phantom Remote Control unit (RCU) and various 3rd party solutions.

## Prepare Your Computer

PCC is compatible with the 32 and 64-bit versions of Windows 7 Pro, Windows 8.1 and Windows 10 operating systems.

1. Ensure that all Firewalls are turned off.
2. Change the computer's Ethernet adapter IP settings to be compatible with the Phantom camera network:

In the Windows 'Control Panel / Network..' change the camera's network properties to these manual settings:

IP address: **100.100.100.1**

Subnet mask: **255.255.0.0**

## Install PCC Software

Install the latest version of Phantom Camera Control (PCC) software from the accompanying CD or download from the following link: [www.phantomhighspeed.com/PCC](http://www.phantomhighspeed.com/PCC)

## Connect the Camera to the Computer

Power up the camera and attach the supplied Ethernet cable between the Phantom camera and the computer.

If a video monitor or an external trigger is being used to trigger the camera, connect them to the appropriate ports on the camera body.

## Insert CFast Card

On VEO-S models, install a CFast 2.0 card (optional). If the card did not come with the camera ensure it is formatted NTFS.



Detailed information about working with CFast cards can be found in Chapter 5 of this manual

## Launch PCC Software

Double-click the PCC icon located on the desktop. Camera should be recognized immediately if connected and network settings are correct.

## Select Camera for Use

In the 'Manager' tab, double-click the Phantom camera to be used from the 'Cameras' group folder.

Click the 'Live' tab.

## Define Recording Parameters

Click 'Cine Settings' and define the following parameters by either selecting the value from the pull-down selection list, or type a value into the respective data entry field.

1. Set 'Resolution' to the required Width x Height
2. Choose the required 'Sample Rate and 'Exposure Time' and 'Exposure Index'
3. Ensure the EDR (Extreme Dynamic Range) is set to zero (0).
4. Set Post Trigger to zero (0) by:
  - a. Moving the 'T' (Trigger Position) slider to the right, or
  - b. Enter zero (0) into the 'Last' data entry field.

Click on the CSR button to perform a Current Session Reference.

With color cameras, perform a White Balance by right-clicking an area of the image that is neutral gray or white, as long as it is not 100% saturated.

## Fine-tune Settings

After CSR and White balance are performed, adjust settings, aperture and/or lighting to get a good exposure. A CSR must be performed after any camera settings are adjusted.

## 'Arm' Camera

Click the 'Capture' button to start recording to the camera's internal RAM memory (circular buffer).

## Trigger

At the end of the action, click the 'Trigger' button at the bottom of the 'Live' panel, or provide a switch closure or an external trigger signal (TTL pulse) via the Trigger connector.

## Playback and Edit Cine

Click the 'Play' tab.

Scrub through the timeline or use the Video Control Buttons to locate the first image to be saved.

Click the 'Mark-in' button.





## Edit Cine (continued)

Locate the last image of the cine to be saved.

Click the 'Mark-Out' button. 

## Review Edited Cine

Select 'Play, Speed & Options' and enable (check) 'Limit to Range'.

Under the Video Control Buttons, click the 'Jump to Start' button and review the edited cine using the Video Control Buttons.

## Save to Computer

Click the big 'Save Cine...' button on the bottom of the 'Play' panel.

In the 'Save Cine' window:

1. Navigate to the folder where you want to save the cine file.
2. Enter a file name for the cine file in the 'File name:' data entry field.
3. From the 'Save as type' pull-down selection list, select the 'Cine Raw, \*.cine' file format.
4. Click the Save button to begin downloading the cine file from the camera.

## Save to CFast (optional)

Click the down-arrow of the 'Save Cine...' button.

Select 'Save RAM Cine to Flash' (in popup window).

Click the Save button to save the cine file onto the CFast 2.0 card

Confirm Flash Cine Save before deleting from internal memory. Select the new Flash Cine from the top Play/Cine drop-down list and scrub through cine file to review.

## Confirm Computer Save

Click the 'Open File'  button

Navigate to the folder and open saved cine file. Review the playback by scrubbing through the file and viewing the playback.

# VEO-S OCC



Use of the VEO-S on-camera control menu requires a video monitor to be connected to the camera. VEO cameras are compatible with HDSDI and HDMI monitors.

The combination of a VEO battery mount, a small camera-powered on-camera monitor and CFast cards creates a fully portable, un-tethered camera system. More details can be found in the accessories section of this manual or at [www.phantomhighspeed.com](http://www.phantomhighspeed.com)

# 4

## On-Camera Controls

### Trigger

A

When camera is in capture mode (writing to internal RAM), button glows red. Trigger is used to trigger the camera with a single tap. When a Cine is captured, button glows green.

When in video playback mode, tap the trigger button to return to a live video output.

When menu is active, tap the trigger button to exit the menu.

To clear previous recording from RAM and re-enter capture mode, hold down the trigger button for 4 seconds.

### Playback

B

Tap to enter playback mode when a cine is stored in RAM. Playback buttons will glow green when camera is in playback mode.

### B-Ref

C

In live mode, a long press of the B-Ref button will perform a Current Session Reference (CSR). When in playback mode, the play-forward symbol is illuminated and this button is used to play forward. A long press will do a fast-forward. Tap to pause.

### Tools

D

In live mode, a tap of the Tools button will cycle through video zoom levels (for focus assist) and threshold (exposure assist) mode. When in playback mode, the play-backward symbol is illuminated and this button is used to play back. A long press will do a fast-reverse. Tap to pause.

### Menu Knob


E

Tap the menu button to activate the camera's menu system as described on the following pages. Turn the knob to navigate through the menu, and tap to select. Exit the menu by waiting 10 seconds or tapping the trigger button.


## OSD Overview



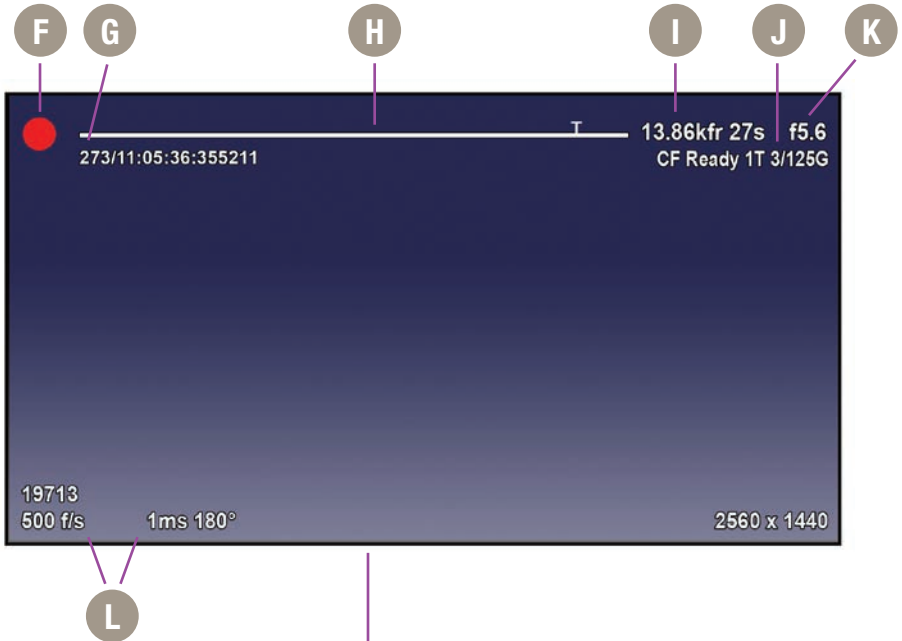


The On-Screen Display (OSD) provides valuable information about the camera's current status over the video outputs along with the live or playback images.

### Video display, Live mode

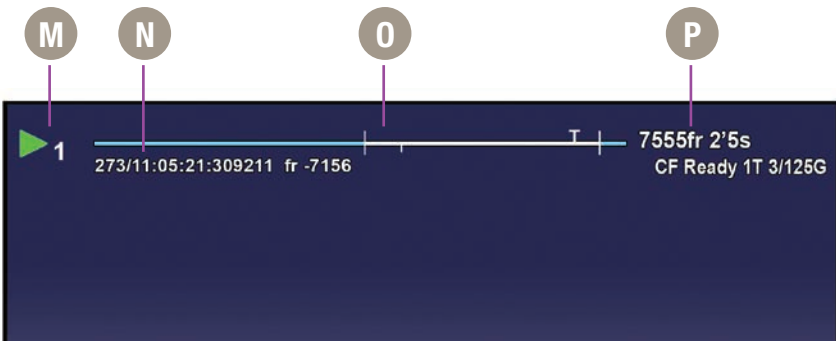

### Video display, Playback mode



<b>Camera State</b>	<b>F</b>	The symbol changes based on camera's state:
		<b>Live:</b> The camera is not recording and a live image is displayed from all SDI ports.
		<b>Capture:</b> The camera is recording to internal memory (RAM), and awaiting a trigger signal.
		<b>Triggered:</b> The camera has been triggered, and is filling RAM memory ('Post-Trigger' frames).
		<b>Cine Stored:</b> Recording has ended, and a Cine is stored in RAM memory. This Cine must be erased from the RAM to begin recording again.
		<b>Playback:</b> The camera is in PLAYBACK mode. RAM Cines can be reviewed, edited and saved to flash.
<b>Timecode</b>	<b>G</b>	Indicates the IRIG time code stamped to each frame. Format is day of year/hour:minute:second:ns.
<b>Buffer Bar w/ Trigger Point</b>	<b>H</b>	This 'time line' represents all frames available in camera RAM (Loop mode) The 'T' indicator represents the user-defined trigger point.
<b>Frame Count and Duration</b>	<b>I</b>	Displays the frame count and recording time based on the current camera settings.
<b>Flash Memory Status</b>	<b>J</b>	Indicates the memory size of the CFast card (if present) and the total recording time available.
<b>EF Lens Aperture Data</b>	<b>K</b>	Displays the F-Stop (aperture) of the lens (valid for Canon EF mount only).
<b>Capture Settings</b>	<b>L</b>	Bottom section of display shows camera name, frame rate, exposure time (displayed in degrees and micro-seconds) and the acquisition resolution.
<b>RAM Cine Indicator</b>	<b>M</b>	Indicates RAM Cine number selected for playback.
<b>Playback bar</b>	<b>N</b>	Playback bar is a visual representation of the Cine timeline with the trigger point (T), mark-in and mark-out (I) points and play head indicated.
<b>Playback Timecode</b>	<b>O</b>	Playback timecode shows the timestamp of each frame in IRIG format and the current frame number.
<b>Playback</b>	<b>P</b>	Frame count and playback duration based on current video settings - within the mark-in and mark-out points.

# menu system

## Menu Overview

The VEO-S On-Camera Control menu provides access to basic and advanced camera settings. The menu is activated with a press of the menu knob and displayed through the camera's video outputs (SDI and HDMI) as a video overlay, on top of the live image.




The menu is subject to change, as functionality may be added with future firmware updates.

## Navigation


Activate the menu by pressing the menu knob on the back of the VEO-S camera. Turn the knob to scroll through each menu item and press to select. The six menu pages can be quickly jumped between by selecting the page title (1/6 CAMERA in this example) and scrolling through them.

To exit the menu tap the trigger button. The menu will also turn itself off after a period of time with no interaction.

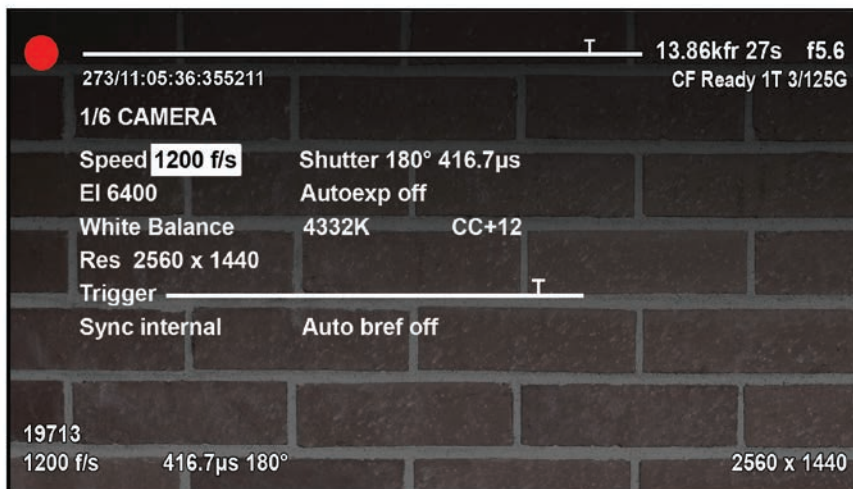

## Six Menu Pages

- 1/6 CAMERA
- 2/6 IMAGE
- 3/6 SETTINGS
- 4/6 INFO
- 5/6 AUTO
- 6/6 ADVANCED

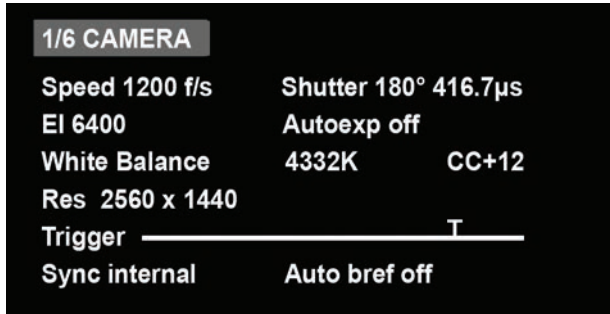

## 1/6 CAMERA

The CAMERA menu page includes control for the fundamental settings of a high speed camera.

### Speed

Set the acquisition frame rate in frames-per-second.

### Shutter

Set the exposure time, which is displayed in degrees and time (microseconds in this example).

### EI

Set the Exposure Index (EI), also known as the “effective ISO”. The lowest setting is the base ISO of the camera.

### Autoexp

Enable autoexposure, which can be useful in the case of changing lighting conditions.

### White Balance

For color cameras, set the white balance by placing a white or neutral gray object in front of the camera. Ensure that the white subject is not fully saturated. Select the word ‘White Balance’ and rotate to select “OK”. The color temperature (K) and color compensation (CC) values can be further manually adjusted if required.

### Res

Set the acquisition resolution of the sensor.

### Trigger

Set the trigger point. The time line represents all frames available in RAM. Frames before the ‘T’ are pre-trigger frames and frames after the ‘T’ are post-trigger frames.

### Sync

Changes the frame sync from internal to an external source.

### Auto bref

When enabled a black reference will be automatically done every time the camera enters capture mode.

2/6 IMAGE	
Master gamma	2.200
Master gain	1.000
Master black	0.000
PA 0 x 0	PAO 0 , 0
Zoom fit	Color Bars off
Video system	1080/24p

## 2/6 IMAGE

The IMAGE page allows for control of image processing and video settings. These image settings are adjustments applied to Cine Raw files as metadata.

### Master gamma

Sets the master gamma, which is the relationship between signal level and brightness output of the image. A linear gamma would have the value of 1.0. The camera's default setting is 2.2 which represents a standard Rec709 gamma curve.

### Master gain

Adjusts the overall signal level of the image in a linear manner. Increasing Gain will further increase the Exposure Index of the camera. Vision Research recommends keeping this close to the default setting of 1 for best image quality.

### Master black

Adjust the baseline black level. The default of 0 should produce images with black at 0 on a waveform monitor.

### PA and PAO

The camera will add a Production Area (PA) with the specified frame size as an overlay on the video image. PAO is the Production Area Offset which will move the Production area from the center of the image both vertically and horizontally. 0 , 0 is the default.

### Zoom

Change the zoom level of the video output. Fit will scale a larger or smaller resolution image and optimize it to the size of the video output. A zoom setting of 1 will show the image pixel-to-pixel and a setting of 2 will zoom up 2:1.



## Color Bars

This will switch all video outputs to display SMPTE HD Color bars

## Video system

Sets the video output to one of the valid video systems. All the common 720p, 1080p, psf and i settings are available. The video outputs will change right away, however the new video system must be confirmed to take effect. If not confirmed it will switch back to its previous setting in a few seconds.

### 3/6 SETTINGS

0 setup0 (2560x1440, 1200f/s, 416.7us)

1 setup1 (2048x1600, 500f/s, 1.000ms)

2 -

3 -

4 -

5 -

Factory Defaults

## 3/6 SETTINGS

The SETTINGS page allows for user setups to be saved and recalled.

### 0-5

There are six available entries. By selecting one of the slots users can save or recall that particular set-up to quickly change all parameters of the camera at a later date. The values in parentheses are meant as a quick reminder of camera settings.

Please note that all camera settings, including video mode, sync mode, image and advanced settings are included. These settings are saved after the camera powers down.

## Factory Settings

Recall the factory defaults to bring the camera back to the original settings from the last time it left the Vision Research factory. This includes all capture, calibration, image processing and video parameters.

This is an important troubleshooting step.

#### 4/6 INFO

**Model: Phantom VEO 640S 72G S/N: 19713**  
**Firmware level: 76 (20340, 3011, 164412)**  
**Sensor: 35° Camera: 54° Fan: 40% TEC: 30%**  
**Default IP Address: 100.100.169.217**  
**User IP Address: -.-.-**

#### 4/6 INFO

The INFO page displays unique information of the camera including:


Model name, memory size and serial number

Firmware level

Current temperature of the Sensor and Camera, and the power of the Fan and the TEC (thermoelectric cooler) of the sensor. This is for monitoring purposes.

Factory-assigned IP address of the camera

User-defined IP address (secondary IP) which can be used with an IP range outside of the Phantom 100.100 network. This is set using Phantom PCC software.

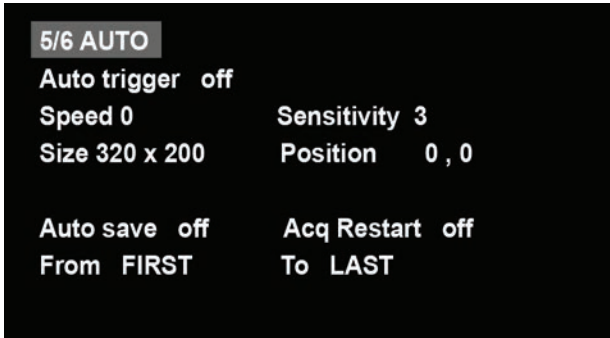

## 5/6 AUTO

The AUTO menu allows for control of some of the camera's automatic functions.

### Auto trigger

Enable the camera's image-based auto-trigger function. When on, the settings for Speed and Sensitivity determine the threshold for the trigger's response time. Vision Research recommends to experiment with these settings before determining what works best for your subject.

The settings for Size and Position define the area in which a change in motion will activate the trigger. A change outside that window will have no effect.

### Auto save

When auto save is enabled, the camera will automatically save the Cine once triggered to an installed CFast card.

### From & To

Used to define the first frame and last frame for the auto save function. By default these are set to the first frame and last frame of the recorded cine.

### From & To

When Acquisition Restart is enabled, the camera will automatically start recording again after the auto-save or auto-play functions are complete. This is particularly useful when using multi-cine memory partitions. Be careful to only use this with auto-save (or auto-play with a video recorder), and pay attention to remaining space on the CFast card.

6/6 ADVANCED			
	R	G	B
Gain	1.000	1.000	1.000
Pedestal	0.000	0.000	0.000
Gamma	2.222	2.222	2.222
CF Format			
Memory partitions			
Frame burst	off	Period 700µs	

## 6/6 ADVANCED

The ADVANCED page includes settings for either less-used settings or features which should be used with caution.

## R G B Gain, Pedestal and Gamma

Set the Red, Green and Blue channels separately for the Gain, Pedestal and Gamma image processing settings. These settings can be used with color cameras to fine-tune the color output. The overall gain, pedestal and gamma functions can be found on the IMAGE page of the menu.

## CF Format

Erase the entire contents of an installed CFast 2.0 card. VEO cameras employ the NTFS file system. CFast cards that are currently in a different format will not be recognized, however they can be formatted for use with VEO with this function.

## Memory partitions

Set the amount of partitions to segment the RAM for multi-cine recording. The RAM is divided evenly, and the same frame rate and recording parameters will apply for each partition.

## Frame burst

Set the number of frames in a burst, which are frames that captured to RAM with every f-sync pulse. 'off' disables burst mode.

## Period

Set the interval between frames in a burst (defined in microseconds)


## Capture a Cine

Capture a Cine file to RAM

1. Ensure camera is in capture mode (trigger button glows red)
2. Tap the trigger button to trigger the camera once the event happens. Remember, the position of the trigger will depend on the post-trigger setting. With a post trigger set at the end, or '0', the trigger should be applied after the action occurs.

## Enter Playback mode

With Cine in RAM, tap the Playback button. The video output will switch to playback view, where you must select the Cine for playback. In the case of multi-cine or partitioned RAM, there will be more than one RAM cine present.

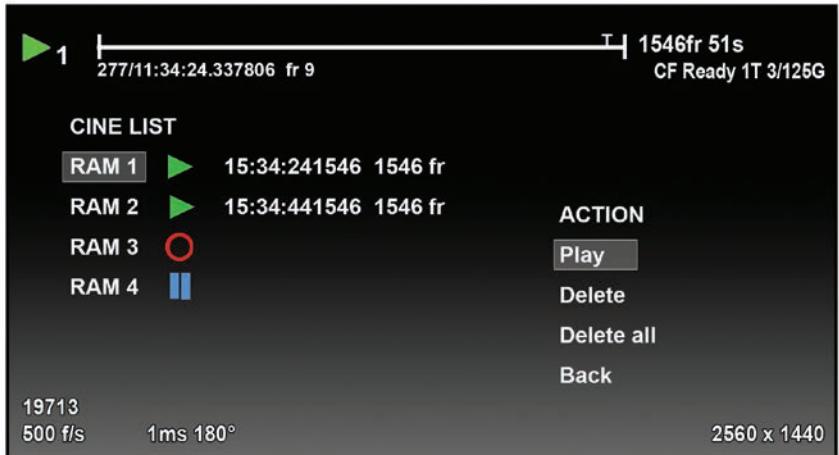


Once the take is selected, there are options to Play, Delete, Delete all, or go back. Clicking play will close the menu and the video begins to play forward.

Use the play forward and play backward buttons, and the menu knob to scrub through the Cine. A long press on the forward and reverse buttons will start a fast-forward and fast-reverse playback.

## Edit the Cine

Tap the menu knob to further edit and save the Cine to CFast. An action menu appears with more options.

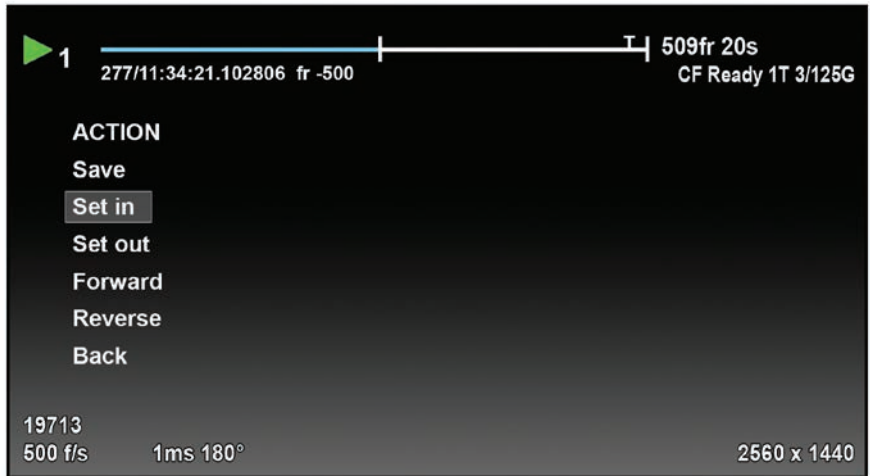

There are a few ways to go through the playback. A preferred way is usually to use the scroll knob to go through the cine.

Set an in-point by selecting “Set in”. This will be the first frame of the cine saved to RAM. Scroll to the last frame you want to save and select “Set out”.

## Save the Cine

Now, select “Save” to save the Cine to the CFast 2.0 card. The OSD will report the fact the CF is saving along with a countdown. It is important not to interrupt this saving process, otherwise the card may need to be re-formatted prior to continued use.

Once saved, the RAM can be cleared and the camera can go back into Capture mode. The fastest way to do this is to hold down the trigger button for 4 seconds.

# 5

## Working with CFast 2.0 Cards

### Introduction



Phantom VEO-S camera models are compatible with industry standard CFast 2.0 cards. These solid-state cards are a common form of media for professional video cameras.

Working with CFast 2.0 cards enables footage to be quickly transferred from the camera's RAM to safe, non-volatile storage which can then be later off-loaded using Phantom PCC software or a CFast 2.0 reader connected to a PC or Mac. There are several benefits to using these cards:

- Security. Using CFast is a secure way to get the recorded Cine Raw files out of volatile RAM.
- Productivity. They eliminate the need to download the file after each shot.
- Quality. Files saved to CFast cards are always saved in the Cine Raw format, which maximizes image quality and workflow options.
- Portability. Using a CFast card means there is no need to connect the camera to a PC.

### Important Workflow Notes


A CFast 2.0 card installed in a Phantom VEO camera can not be used for video playback. Video playback is from camera RAM only. CFast takes can be reviewed over Ethernet, in Phantom PCC software.

VEO cameras only support Loop mode recording. Images must be captured to RAM first, then reviewed and saved to the CFast card. The transfer rate from RAM to the card is approximately 90 MB/second.

VEO cameras do not support Run/Stop mode (longer record times at lower frame rates) like cameras with CineMag compatibility.

## Choosing a card

### CFast 2.0 Card Format

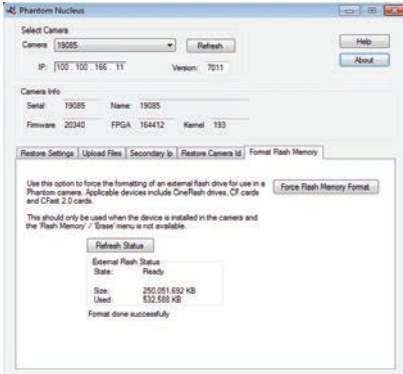

## Installing and Removing a CFast 2.0 card

The only requirement is that the card is specified as “CFast 2.0”. Vision Research has verified Lexar x3600 cards, however any CFast 2.0 is expected to work.

VEO cameras require the card to be formatted with the NTFS file system. The NTFS format allows CFast 2.0 cards to be mounted to a Windows (read/write) or Mac (read-only) without the need for special drivers.

CFast cards purchased from Vision Research will be pre-formatted, however it is likely that cards purchased elsewhere will have a different file system. When cards are in a different file system, the card will show a “CF Error” on the on-screen display, and PCC software will not recognize that there is a card installed.

There are three ways to format a CFast 2.0 card:

1. Installed in the camera, using the on-camera control menu. The camera will count down 3-2-1 and then it will be ready. It takes a few seconds.
2. Installed in the camera, using the Nucleus utility in Phantom PCC (pictured at left). The Format Flash Memory tab and “Force Flash Memory Format” function should be selected.
3. Installed in a CFast 2.0 reader (typically USB or Thunderbolt) connected to a Mac or Windows PC, using the disk format utility. Choose NTFS while doing the format.



Formatting erases all files on the card. Ensure takes are saved to a secure location before using any of the format options.

Insert the card into the camera’s CFast card slot on the rear of VEO-S camera models. The card will be available immediately, as long as it is formatted NTFS as described above.

To remove the card, press the plastic lever under the card slot. Wait approximately 10 seconds before installing another card. During this time “CF Disconnecting” will appear on the on-screen display.



## Saving to and from a CFast 2.0 card

First, a Cine must be saved to the RAM of the camera: Start in capture mode, trigger the camera once the event happens (depending on the post-trigger position)

Review the Cine in RAM, set in and out points as described in the previous section, and save to the CFast 2.0 card. Once the card is full, there are two ways to save the files.

1. Drag and drop the files using a CFast 2.0 card reader - these are typically available with USB or Thunderbolt interfaces (or both).
2. Use PCC software to save the files from the card. The following goes over the PCC procedure:

From the 'Play' tab in PCC, select the cine you want to save from the 'Cine:' pull-down menu. You will see all clips in the RAM as well as the CFast in this list. Once you've selected a clip, you can mark an in and out point if desired by clicking the '[' and ']' buttons respectively.

Then click the green 'Save Cine...' button. In the 'Save Cine' dialog box, choose 'Cine Raw' as the file format, navigate to the folder where you wish to save the clip and click 'Save.'

In the Play Tab, click the triangle to the right of the 'Save Cine...' button, and from the popup menu select 'Save All Flash Cines To File.'


In the subsequent save dialog window, navigate to the folder where you wish to save the clips, and select the 'Cine Raw' file format. Choose a name for the group of Cine files and click the 'Save' button. Each Cine's file name will start with the name you choose, and end with the cine number.

In the Play Tab, click the triangle to the right of the 'Save Cine...' button, and from the popup menu select 'Select&Save Cines to File.'

## Saving an Individual Cine




## Saving ALL Cine files

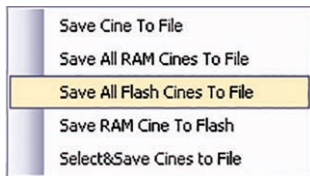

## Saving Selected Cine files



"\_Flashcine#" will be appended to the file name of all batch-saved clips, where "#" represents the number of each take.

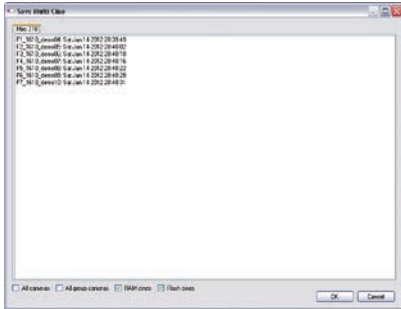

## Selecting a file format (choose Cine Raw)

## Erasing a CFast 2.0 card

In the popup window, select the cines you wish to save. Use the shift key to select a range of clips, or the control key to add individual clips.

When you've selected the cines you want to save, click "OK." In the subsequent save dialog, choose the destination folder and select the Cine Raw file format. Choose a name for the clips and click the "Save" button.

Vision Research recommends that you save the clips from a CFast card as Cine Raw files, even though it is possible to save them in a number of file formats. Cine Raw files not only preserve all the metadata of the clip (such as frame rate, shutter speed, timestamps, etc), it is the fastest and best-quality format. Cine Raw files can easily be converted to other formats later.

The 10-bit 'Packed' format is the default when saving Cine Raw files. This results in smaller, more manageable files than the 12-bit 'unpacked' format, and with no quality loss. If you are using 3rd party post production software to read the Cine Raw files, please ensure they are compatible with this 'packed' format. To save the Cine Raw in an unpacked format, simply un-check the 'Packed' box prior to saving.

A CFast 2.0 card can be erased using the CF Format function of the VEO menu system, or in Phantom PCC software. PCC will let you delete individual cines, otherwise the format will always erase all Cines.

In PCC software, navigate to the "Live>Flash Memory" menu and click the "Erase" button. Delete individual clips, delete all, or Format the card. Confirm that you wish to delete all clips.

Once complete, all data on the CFast card will be erased, and the card will be ready for recording again right away.

# 6

## Phantom PCC Software



The latest version of Phantom PCC software can always be downloaded from the Vision Research website: [www.phantomhighspeed.com/pcc](http://www.phantomhighspeed.com/pcc)

### Pre-Installation

Phantom control software is certified to operate with the following Microsoft Windows operating systems: Windows 7 Pro, Windows 8.1 and 10.

The computer and camera must be associated with the same sub-network to communicate with one another. Vision Research has preset IP address (100.100.x.x) with a subnet mask (255.255.0.0) to the camera.


Typically the IP address 100.100.100.1 and subnet 255.255.0.0 is defined to the control computer's network card. . When multiple computers are used to control the same camera, each computer requires a unique IP address, for example, 100.100.100.1 (255.255.0.0), 100.100.100.2 (255.255.0.0), and so on.

### PCC Application Overview

Phantom Camera Control (PCC) software is built around a multi-layered work area that includes the following work areas:


### Toolbar

Provides quick access to the most frequently used functions. Position the mouse over a button and wait for a second to display a text box describing what it is.

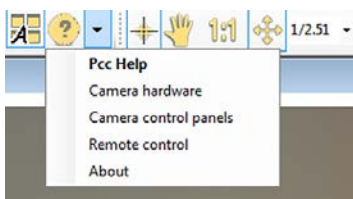

Note the 'Help' section. This provides valuable reference information on the software, including extensive documentation.

## Control Tabs

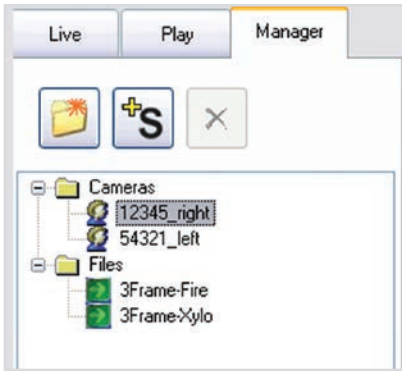

## PVP (Phantom Video Player) Application Overview

The main window of PCC is divided into three tabs: Live, Play and Manager.

When first started, the 'Manager' tab is selected. It is in this tab connected cameras are displayed, selected for use, and renamed. It is also used to manage saved Cine files.

To rename, highlight then click the name of a camera. This can be useful when working with multiple cameras.

All camera control and setting of shooting parameters (frame rate, shutter, etc.) is performed in the 'Live' tab.


The 'Play' tab is used to review, edit, and save Cine files, (either from the camera or from files on the local hard drive).

PVP can be launched directly from the desktop, or by clicking the 'Video Out' toolbar button in PCC.



PVP controls only the camera's video outputs (HD-SDI and HDMI) as connected to a compatible monitor.

It provides very fast control for playback and basic capture, trigger and save commands.

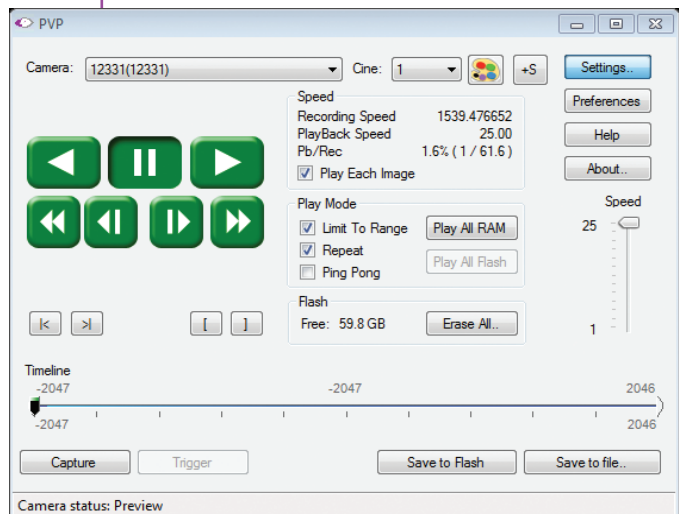


# pcc and pvp

## Camera Control via PCC



PVP, provides the ability to view, capture, review, edit, and/or save a Cine recorded into the camera's RAM to a hard drive, or installed CFast card. PVP is extremely effective when used with high-resolution cameras since most computers are not powerful enough to view the live or captured raw files smoothly over Ethernet.

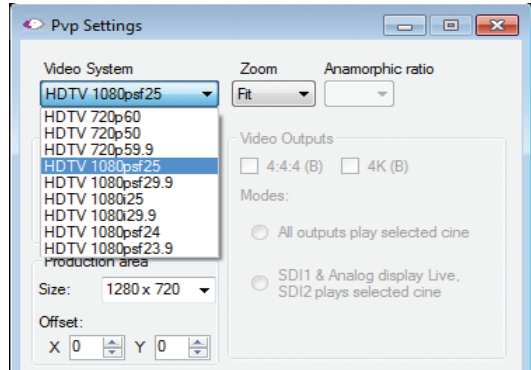

The camera's video mode and display settings are also set through PVP. The best video system for the camera or project will vary based on the country you are in, what kind of video monitor used, and the required display resolution.

All available video systems for the connected camera can be found in the 'Settings' menu of PVP along with production area and other video overlay controls.

The first time PCC is launched it is important to set up user preferences. PCC provides the ability to select various units for specific camera parameters by clicking the 'Preference' button at the bottom Manager tab.


Units can be set to commonly used values ('Presets') or they can be customized using the pull-down selections. First time users should use one of the three 'Presets'.



The 'Exp' unit is probably the most important unit to be set. It specifies what unit to use for displaying the exposure time. This can be displayed in degrees, microseconds or percentage. 360 degrees = 100% = the maximum exposure time. The other units to set are PTF (Post Trigger Frames) and EDR which are covered later in this section.

## Selecting a Camera

Double-click the camera(s) to be controlled listed in the 'Manager' tab, or select the camera(s) from the 'Camera' pull-down list in the 'Live' tab.

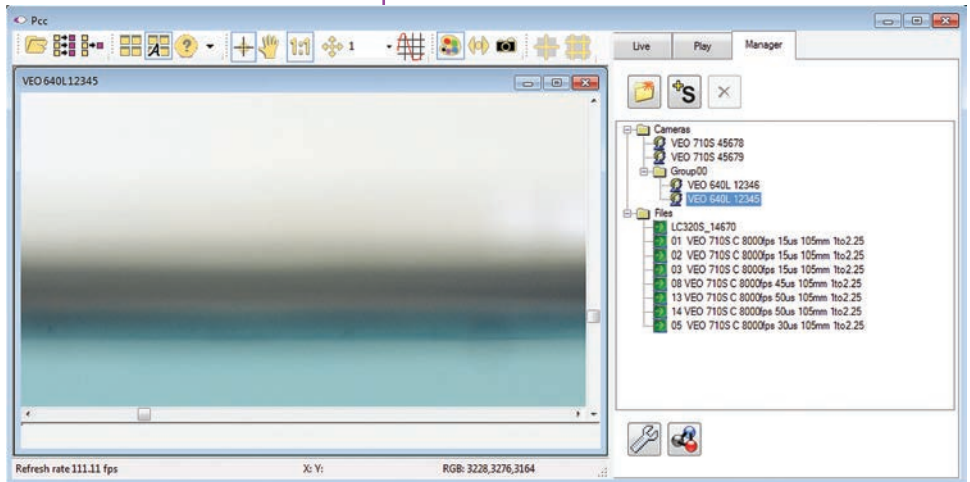


Once a camera is selected a 'Preview' panel will display to the left of the control tabs showing the current image being captured by the camera. This image may differ slightly to that of the image being output over the camera's 3G HD-SDI port due to display differences in the video monitor and computer screens.

## Image Processing



Image Tools provides extensive controls over the look of the image, from color and contrast settings, to image orientation and crop settings. The menu is accessed by clicking on the 'Image Tools' toolbar button (the one that looks like an artist's palette).

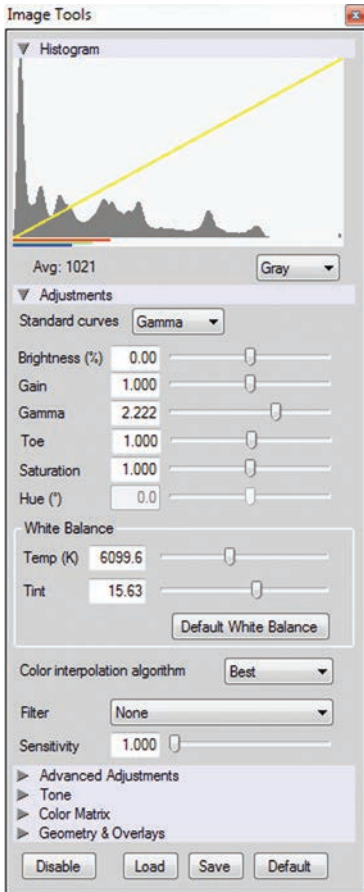

The top of the 'Image Tools' window displays a 'Histogram'. This is a graphic representation of the pixel brightness levels of the displayed image. The left represents black, the right represents white and the height represents the proportionate number of pixels at that particular value. Unlike a waveform, the histogram's shape is not representative of the content - it is simply an averaging of the brightness values.

Below the histogram are controls which change image settings of the live images, recorded images and the video output of the camera.

Some of the variables include; brightness, gain, gamma, saturation, hue, white balance adjustments (Temp (K) and Tint), individual red, green and blue pedestal, gain and gamma values, tone control, and more.

At the bottom of the window is a 'Default' button that restores all parameters except white balance, tone, and color matrix to their default values.

The 'Default White Balance' button restores white balance to the factory defaults on color cameras.

The Tone 'Reset' button restores the image tone to the default values, and the Color Matrix 'Restore' button return the color matrix values to their default values.



Changes made here only affect the meta data of the Cine raw file. They are applied in software, but not "baked in." If you are saving to a different format or recording the video output ensure everything is set to values that produce the image you wish to record.



The 'Zoom Actual Size' toolbar button resizes the images being displayed in the Preview/Playback panel to their actual size.




The 'Zoom Fit' toolbar button resizes the images to fit panel. Images can also be zoomed to a specific magnification ratio by selecting a number from the pull-down list to right of the Zoom Fit button.

## Automatic White Balance


Performing a White Balance should be the first step in color adjustment (White balance not applicable to monochrome cameras).

Right click on an area that resembles white in the image in the 'Preview' or Playback' panel, then click on the 'White Balance' pop-up window. It is not necessary to fill the frame with white – a small target can be used.

It is recommended to perform the White balance after a CSR (current session reference).

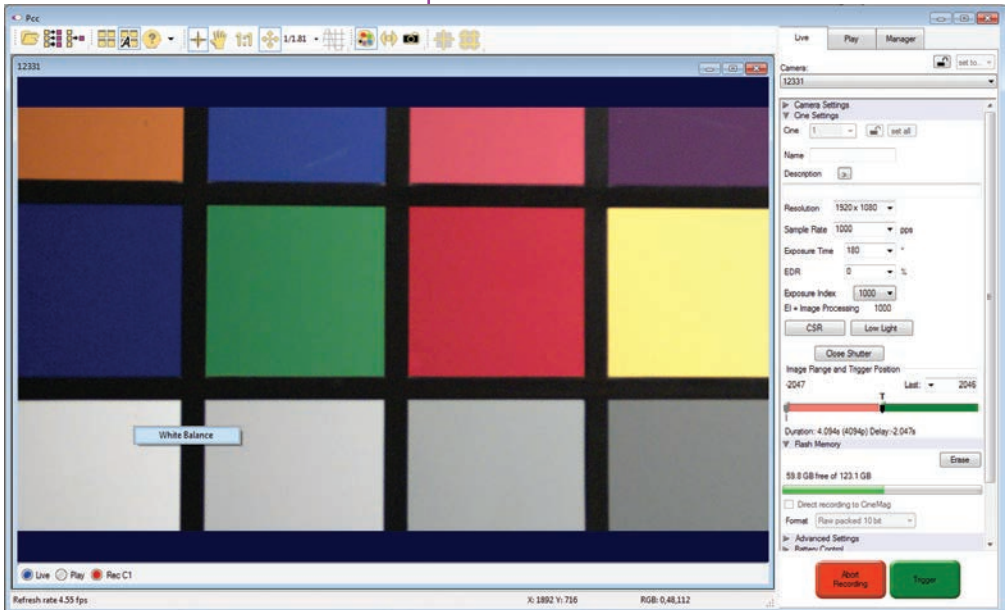

## Capture Setup

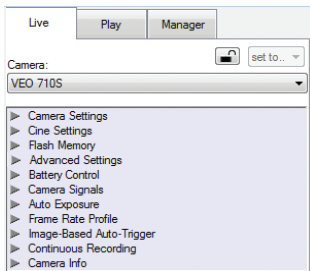

Just below the 'Camera' selector in the 'Live' tab are a series of expandable headers, which contain groups of related camera settings.



This manual covers the most commonly used settings, see the 'PCC Help' file for details of other settings.



## Camera Settings & Cine Settings



Camera Settings are used to set and recall the overall camera system parameters. Cine Settings are used to set the capture parameters.

The screenshot displays a software interface for camera configuration, divided into two main sections: Camera Settings and Cine Settings.

**Camera Settings:**

- Current Time:** Tue Oct 04 2016 15:49:40 utc. A "Set Time.." button is present.
- Time Zone:** Radio buttons for "Local" and "utc (GMT)". "utc (GMT)" is selected.
- Bit Depth:** A dropdown menu set to "12".
- Partitions:** A dropdown menu set to "1".
- Lens Control:** Includes "Aperture" and "Focus" controls with "+" and "-" buttons. A "Fast+" and "Fast-" indicator is shown. A note below reads: "Use Shift or Ctrl for smaller focus steps."
- Backup & restore settings:** Includes "Load..." and "Save..." buttons.

**Cine Settings:**

- Cine:** A dropdown menu set to "1". A "set all" button is next to it.
- Name:** An empty text input field.
- Description:** A text input field with a right-pointing arrow button.
- Resolution:** A dropdown menu set to "2560 x 1440".
- Sample Rate:** A dropdown menu set to "200" pps.
- Exposure Time:** A dropdown menu set to "4900"  $\mu$ s.
- EDR:** A dropdown menu set to "0"  $\mu$ s.
- Exposure Index:** A dropdown menu set to "1250".
- EI + Image Processing:** A dropdown menu set to "1250".
- Buttons:** "CSR" and "Low Light" buttons.
- Close Shutter:** A button.

**Image Range and Trigger Position:**

- Value: "-13847".
- Label: "Last: 9".
- A horizontal slider bar with a red segment and a black arrowhead on the right.
- Text below: "Duration: 69.285s (13857p) Delay:-69.235s".

**Navigation Menu:**

- Flash Memory
- Advanced Settings
- Battery Control
- Camera Signals
- Auto Exposure
- Frame Rate Profile
- Image-Based Auto-Trigger
- Continuous Recording
- Camera Info

**Set Time:** Synchronizes the time stamps embedded in the recorded image data to the computer's clock. Local and UTC change the time zone of the time code.

**Bit Depth:** VEO cameras operate in 12-bit mode only.

**Partitions:** Select the number of desired partitions (evenly divided memory segments) from the 'Partitions' pull-down menu. For basic camera setups, this should be set to one.

**Lens Control:** Available for Canon EF lenses only, for control of aperture and focus.

**Backup & Restore:** Allows for user and factory settings to be saved and recalled from the camera's memory.

**Resolution:** Set the camera's acquisition resolution. There are several options in the pull-down menu, alternatively a resolution can be typed in and the closest valid resolution will be set.

**Sample Rate:** Set the acquisition frame rate in frames-per-second (FPS).

**Exposure Time (shutter):** Set the exposure time in degrees, microseconds, or percentage (this depends on how the PCC preferences are set).

**EDR (Extreme Dynamic Range):** Set a secondary unique exposure time to pixels that may become fully saturated or overexposed. This is valuable for monochrome cameras, but be careful with color cameras as a color cast will occur on the areas of the image which EDR is applied.

**Exposure Index:** Set the exposure index (Effective ISO) of the image. Adding other image settings, such as gain, will contribute to the overall EI value and the combined value is also shown. The combined value is what should be used to determine lighting.

**CSR (Current Session Reference):** Closes the camera's internal shutter and resets the black point of every pixel for optimal image quality.

## Key Advanced Settings

Start/End of recording actions

- Auto Black Reference
- Auto save to CineMag/built-in Flash
- Auto save to CineFlash/CardFlash  
filename:
- Auto play Video Out  times
- Range:  FullCine  
First:  Last:
- Restart Recording

External Sync

Sync Imaging:  ▼

Master camera serial (0=none)

Frame Delay   $\mu$ s

Image Range and Trigger Position: The slider represents the memory buffer, with the 'Duration' indicated in seconds and the total number of frames available.

The trigger position is indicated in the 'Last' pull-down menu and as the 'T' slider along the timeline. The trigger position is the point at which the camera stops continually recording when a trigger signal is detected.

The first of these key features is the option to enable the 'Start/End of recording actions' to be performed automatically at the beginning or end of a shot. The most common ones are:

- 'Auto save to CineFlash/CardFlash' this feature saves a user-specified portion of a clip to the CFast card immediately after recording.
- 'Auto play Video Out' begins playback after recording. The range marked under 'Auto play Video Out' affects both playback and saving to the CFast 2.0 card.
- 'Restart Recording,' when enabled, automatically restarts the recording process after the 'Auto' actions have been performed.



When 'Restart Recording' is enabled PCC does not provide any user confirmation before the clip is erased from RAM and starts recording again.

This feature should be used with care!


'External Sync' instructs the camera to utilize one of the following three frame sync clock sources:

- Internal - instructs the camera to utilize its' internal crystal oscillator to drive the camera's frame rate.
- External - should be selected when an externally supplied frame sync clock pulse is supplied to drive the frame rate. This can be used to synchronize two cameras together via F-Sync.

## Flash Memory

## Recording a Cine

## Triggering the Camera

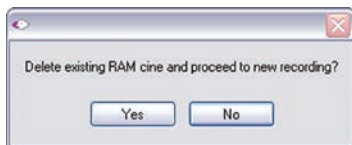

- IRIG - should be selected when an IRIG-B signal is supplied to drive the camera's frame rate. When using IRIG, frame rate can only be set in multiples of 100.
- LockToVideo - Frame rate is driven by the camera's current video rate. FPS will jump to the closest multiple of the current video rate (23.98, 24, 25, 29.97 or 30).

Displays the amount of 'Free' space and size (in Giga-bytes) of an installed CFast card. Direct recording is not an option for VEO cameras. By clicking 'Erase' a secondary menu pops up which allows you to delete individual files or format the card.

To begin recording to the camera's RAM click the red 'Capture' button.



The red 'Capture' button changes to "Abort Recording" and the green 'Trigger' button is enabled when the camera is recording. The Abort Recording button instructs the camera to stop recording, leaving the camera's RAM empty.



Selecting the 'Trigger' button instructs the camera to immediately stop recording when the 'Trigger Position' is set to zero. If a value greater than zero is set, the camera will continue to record 'post-trigger' frames until the user-specified value is met.




If a clip exists in the camera's memory, you will be asked if you are sure you wish to delete it before continuing. If yes, click 'Delete cine(s) and start new recording'.



Using the camera's 'Trigger' button, or an external trigger signal provides a more accurate trigger to the camera.

## Reviewing a Cine

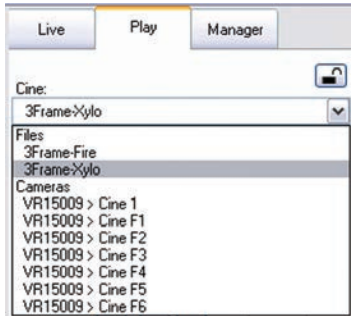


Once the camera has completed recording a Cine in the camera's RAM it can be reviewed by selecting it from the 'Cine' pull-down selection list in the PCC 'Play' tab.



A previously saved Cine stored on the computer's hard drive can be opened using the 'Open File' toolbar button (This also places the file under the 'Cines' group folder in the Manager tab).

Playback options can be changed via the 'Play Speed & Options' and the Cines' metadata can be viewed in the 'Frame Info' and 'Cine Info' sections.

Use the 'Video Control' buttons to review the cine.

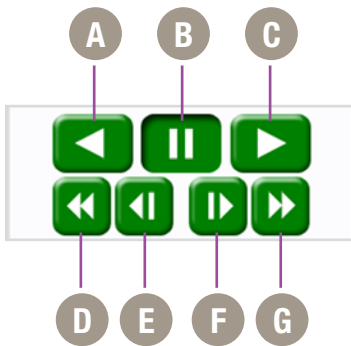

- A** Rewind
- B** Pause
- C** Play
- D** Fast Rewind
- E** Rewind 1-Frame
- F** Advance 1-Frame
- G** Fast Forward


## Performing a Quick Search Through a Cine



Quickly search through cine files to find the points of interest:


'Scroll' (scrub) through the clip using the 'Image Location' slider or click anywhere on the timeline to jump to points in the cine quickly.


'Jump' to the trigger frame by clicking on the 'T' button, or jump to specific frames by entering the frame number into the jump "#" data entry field, then hit the enter key.

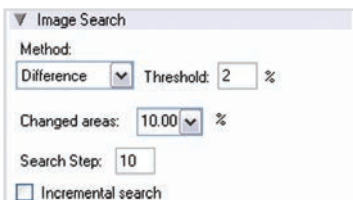

'Image Search'. The goal is to search or find an image change in the recording, based on the difference between image content. Right-Click on the 'Play' button to begin the image search. Besides image content changes, Image Search can also look for images that are tagged as 'Event' images.

## Editing a Cine

Using the following 'Video Control' buttons locate the first image of the cine to be saved and click the 'Mark-In'  button.

Locate the last image of the cine to be saved and click the 'Mark-Out'  button.


Click 'Play, Speed, & Options' and enable (check) 'Limit to Range'.

Under the 'Video Control' buttons click the 'Jump to Start'  button, then review the edited cine.

## Saving a Cine

Click the 'Save Cine...' button to save the edited cine to the computer's hard drive.

If you wish to save the clip to a CFast 2.0 card, click the down-arrow to the right of the 'Save Cine...' button and select 'Save RAM Cine to Flash'.

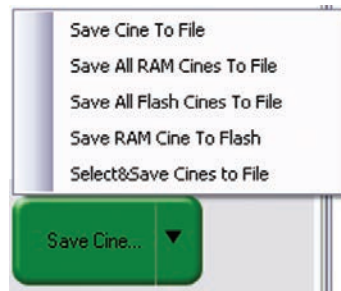

## Working with Cine files

The images recorded on the camera's RAM or CFast card are stored in a Vision Research proprietary RAW (uncompressed) file structure called a 'Cine' file.

These Cine files can be converted to industry standard formats (ProRes, H264, DPX, DNG, TIFF, JPEG, and more) with PCC software provided by Vision Research.

Phantom PCC and PVP software are only compatible with Windows operating systems, however there are third party solutions available for working with Phantom cameras in Mac OSX.


Glue Tools™ offers the most versatile solution, called the 'Phantom Cine Toolkit'. The Toolkit allows for cine raw files to be viewed on the Mac in a quicktime .mov wrapper. This enables many popular editing programs to work with cine files, such as Final Cut Pro and Avid Media Composer.

## Compatibility with Video Editing Programs

Several popular video editing programs, such as DaVinci Resolve and Adobe Premiere, have incorporated the Phantom Cine Raw file format into their software. This means Cine files do not have to be converted and no additional software is required.

Please test the footage with the program you choose before committing, as updates to the program or Cine file format can sometimes break compatibility. For this reason, it is important to know how to properly convert Cine Raw files using PCC.

## Converting Cine Raw Files

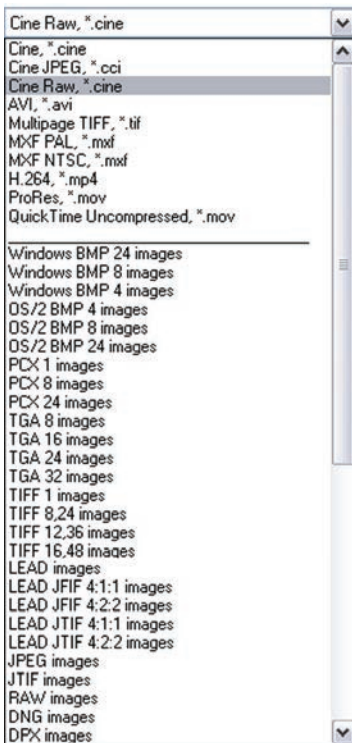

Single cine files can be converted by selecting the desired format from the 'Save as Type' selection list in the 'Save Cine' dialogue window.

The file formats above the separator line in the 'Save as Type' selection list are 'movie-like' formats (meaning the entire clip will be saved as a single file) while the formats below the line are image formats (meaning each frame of cine will be saved as a sequence of images).



Re-saving a clip in the 'Cine RAW' format can be useful for creating sub-clips with no loss in image quality or metadata.

To convert a cine to a 'movie-like' format select the desired format from the list, navigate to the destination folder, assign a file name to the clip and save.

Some valuable parameters can be found in the 'advanced settings' window, such as the particular codec. In the case of ProRes, the default is 4:2:2 HQ, however other options are available.

Other formats, like .avi and .mp4 allow the compression ratio to be entered. The lowest compression (highest quality) is the default.



Ensure all image adjustments have been applied prior to initiating the conversion process. All metadata will be embedded into the converted images.

## Converting to a Series or Stack of Images

To convert a cine clip into a sequence of images (frames) you must add one of the following annotations to the end of the file name: '!n' or '+n' (where n is a number between 1 to 8, corresponding to the Cine's frame count). If a cine has up to 999 frames, the number 3 can be used. If it has 9999 frames then 4 can be used. This will assign the sequential frame numbers to the file name for each new image.

Example: image\_!5.tif

The '!' annotator instructs the software to append the cine's image number (relative to the trigger point) to the file name. If the first frame in the clip is - 100, then the first converted frame will have the name: image\_-00100.tif.

The '+' annotator adds frame numbers starting from 1.

Example: image\_+5.tif

This will cause the first converted frame to have the name: image\_00001.tif

## Batch Convert



The 'Batch Convert Files' toolbar button can be used to convert multiple saved cine files into any one of the supported file formats. Use the shift and/or control keys to select the cine files you wish to convert in the 'Open Cine' dialogue window, then click the 'Open' button.


Navigate to the destination folder and select the file format. The 'File Name' will depend on the type of file format you are converting to.

If you are converting the cine file into a 'movie-like' formats leave the file name as 'All selected file.' The software automatically assigns the original file name to the converted file.

If converting each Cine into a sequence of images, then the '+' or '!' annotators must be used, followed by the specified number (example: *image\_+5*)

PCC creates a separate folder for each file, assigns the original file name and appends the appropriate image number and extension to each image.

Once the 'Convert' button is clicked a progress window appears for the duration of the conversion process.

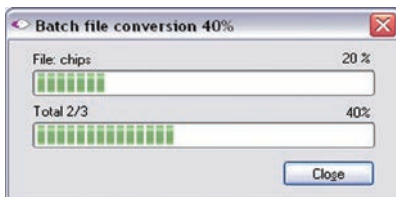





# 7

## Programmable I/O Signal Architecture

### “Programmable” vs “Assignable”

Phantom cameras have long employed the use of Auxiliary ports where one BNC port, whether on the camera body, capture cable or break-out box, can be assigned to one of a few different signals. This has been necessary due to an increasing number of signals and a limited amount of physical space on the camera and pins on the capture connector.

On those cameras the port is labeled “Aux” and the ‘Camera Signals’ menu in PCC is used to select the signal. This feature can be referred to as “Assignable” I/O.

With the introduction of the Phantom VEO the camera incorporates a pulse processor, which contributes to a new powerful feature called “Programmable I/O”. In addition to assigning different signals, now the signal characteristics can be modified to interface with external devices not before possible.

In most cases the signal polarity, filter time, delay, pulse width and edge (rising vs falling) can be set. Setting these characteristics is referred to as “pulse processor control”.

### Phantom VEO and Programmable I/O


Programmable I/O ports can be identified on the camera body with a ‘P’. Both models have a fixed trigger and Timecode-in port, and then VEO S-models have four Programmable I/O ports (P3, P4, P5 and P6) and L-models have two (P3 and P5)

Each port is to be identified in the PCC ‘Camera Signals’ menu by using the port number. Each Programmable I/O signal has a default which will be set after a factory reset or by using the “signal defaults” function in PCC.


## VEO Signals with Default Assignments

	VEO L-models	VEO S-models
Port 1	Trigger (fixed)	Trigger (fixed)
Port 2	Timecode-in (fixed)	Timecode-in (fixed)
Port 3 (P3)	Prog I/O - Default: F-Sync	Prog I/O - Default: Strobe
Port 4 (P4)	N/A	Prog I/O - Default: F-Sync
Port 5 (P5)	Prog I/O - Default: Strobe	Prog I/O - Default: Ready
Port 6 (P6)	N/A	Prog I/O - Default: Timecode out
Range Data	None	Yes, dedicated Fischer port

## PCC interface

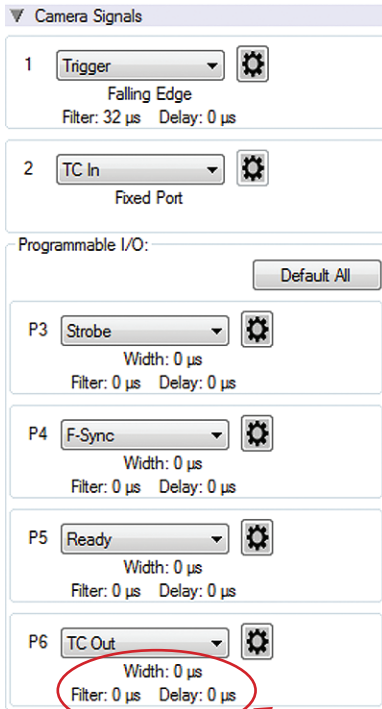

Beginning with Phantom PCC 2.8 the Camera Signals menu, located in the Live Tab, provides access to and control over these Programmable I/O signals. All listed signals are not necessarily active with VEO, including Runstop and Mstrobe.


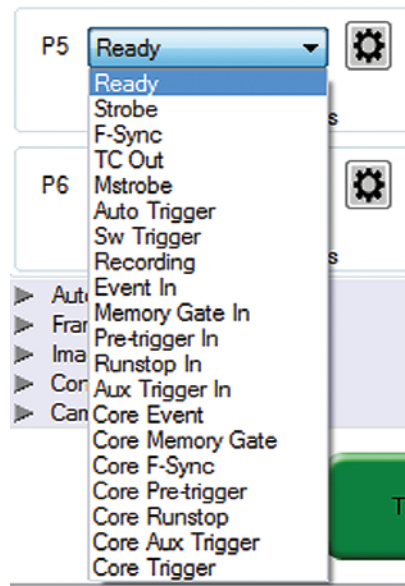


A summary of the current signal settings is found under the pull-down associated with each port. By clicking "Default All" PCC will re-assign the factory-assigned defaults for the Programmable I/O signals.

## Pulse Processor Control

After selecting the signal assignment, further configuration is possible by clicking the gear symbol next to each port. The Pulse Control menu is opened, as shown below.

A graphic representation of the signal behavior is also displayed, however this is **not to scale** and should just be used as a reference. Use of this feature requires an oscilloscope to truly visualize the signals and the subsequent changes with each adjustment.

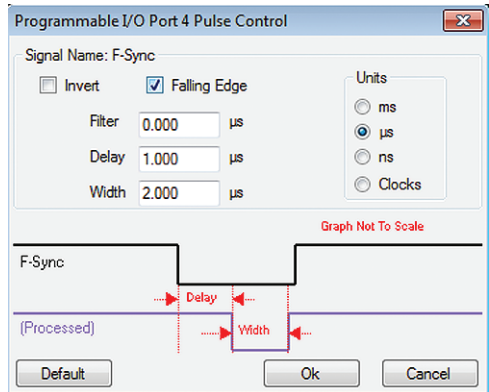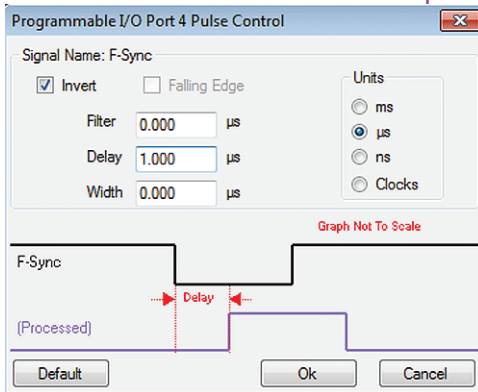

## Summary of Pulse Processor Settings

**Invert:** Inverts the signal at the output of the pulse processor.

**Falling:** Selects 'Falling Edge' mode for the pulse processor. This mode is only relevant if the 'Width' is also specified. When the 'Falling' token is present together with 'Width', the pulse processor will generate a negative pulse, triggered from the negative edge of the input signal.

**Delay:** Delays the output pulse by the specified time in ms,  $\mu\text{s}$ , ns or camera clock multiples. If the 'Width' token is not present, both edges of the signal are delayed by the same amount. If present, the delay is measured from the rising edge of the **input\*** signal unless the 'Falling' token is present, in which case the delay is measured from the falling edge of the 'input'. The delay time is specified in microseconds (as a floating point number), and is internally converted and rounded to pixel clock units.

**\*Input:** When a signal is generated by the camera it serves as an input to the "pulse processor", so in this context the term 'input' does not represent an externally generated signal.

## Pulse Processor Settings (cntd.)

**Width (Pulse Width):** When a 'Width' token is present, a defined-length pulse is generated, which starts after the specified 'Delay', after the active edge of the 'input' signal. The length of the pulse is specified in microseconds (as a floating point number) and internally converted to pixel clock units. The maximum pulse width is at least 10 seconds. However, if the period of the 'input' signal is lower than the selected width, the latter is dynamically clamped to the signal period. The minimum pulse width is one pixel clock.

**Filter (Filter Time):** When a filter token is present, the 'input' of the pulse processor is filtered through an edge filter of the specified time. The time of the filter can be between 0 and 1 second. In order for the output of the filter to be asserted, the 'input' signal must be continuously asserted for the specified duration. In order for the output of the filter to be de-asserted, the 'input' signal must be continuously de-asserted for the same duration. The edges of the 'input' are thus delayed by the specified filter time (for a 'clean' input pulse). Filtering is applied before and independently of the delay and duration. The filter time is specified in microseconds (as a floating point number), and is internally converted and rounded to pixel clock units.

## Pixel Clock

The period of the pixel clock is the basic time interval for all camera timing.

Please note that pulse processors can sometimes generate pulses that are too short for the output drivers to switch properly, and as such the processed signal should be verified with an oscilloscope before use.

## Programmable Signals and Descriptions

**Ready:** An isolated open collector output with 1k pull-up signal (active high). Ready is asserted when the camera goes into capture mode and is de-asserted either when the Cine is triggered, or when the Cine recording is completed. Ready changes synchronously with frame capture (at the end of each exposure), so in external sync mode it will not change until F-Sync pulses are received.

**Strobe:** An isolated open collector output signal, with 1k pull-up. When asserted (low) Strobe indicates that the camera integrates (the electronic shutter is open). Strobe is low for the duration of the exposure.

## Programmable Signals and Descriptions (cntd.)



**Note:** All descriptions are the signal's default state prior to processing.

**F-Sync:** Is the only signal which can be set as an output or input. By default it is output (sync-internal). Output signal is a frame sync pulse from the camera's frame rate generator. A short (few hundred ns depending on camera model) negative pulse, with the falling edge used as timing reference. Input signal is active on falling edge (default state is high).

**TC Out:** A positive polarity time code signal. Normally an unmodulated (dc-shifted) IRIG-B (at RS-232 levels), which follows the internal time base of the camera. It is recommended not to process the TC-Out, since a processed signal may no longer represent a standard or accurate time code.

**Auto Trigger:** Used to output a hardware trigger signal or pulse with the duration.

**Software Trigger:** An active high output signal (pulse) generated as a result of the trigger protocol command.

**Recording:** An active high output signal. When active, indicates the camera is recording into a RAM partition.

**Event In:** If the input is sampled low at the end of an exposure, an 'E' (Event) bit in the frame's time stamp is set.

**Memory Gate In:** If the input is sampled low at the end of an exposure, the corresponding frame is skipped from storage to RAM.

**Pre-trigger:** An active low input (default high) signal. Keeping this signal low for enough time (10-500ms, or until the 'Ready' signal goes high) will make the camera start recording if it has an available RAM partition.

**Aux Trigger:** An input signal active on rising edge (default high). This is an alternative trigger input that can be processed through the programmable port pulse processors and assigned to different ports.

# core signals

## Programmable Signals and Descriptions: The Core Signals

Core signals are copies of externally generated signals, routed through the camera and output to assigned ports. Core signals can be pulse-processed before being output.

The current list of signals is:

**Core Event:** Feedback output from the Event In signal. The feedback is taken after any pulse processor for the input.

**Core Memory Gate:** Feedback output from the Memory Gate In signal. The feedback is taken after any pulse processor for the input.

**Core Frame Sync:** Feedback output from the F-Sync In input. The feedback is taken after any pulse processor for the input, but before the delay element.

**Core Pretrigger:** Feedback output from the Pre-Trigger signal. The feedback is taken after any pulse processor for the input.

**Core Auxtrigger:** Feedback output from the Aux Trigger In signal. The feedback is taken after any pulse processor for the input.

**Core Trigger:** Feedback output from the main Trigger input. The feedback is taken before the trigger signal is affected by the trigger polarity, filter or delay settings. “Core Trigger” can be used like a “Trigger Out” signal.

# 8

## Measurements

### Introduction


Included in PCC software is a set of 2D motion analysis tools which go a step beyond the visual when it comes to providing valuable data about the subject. Analysts can perform timing, position, distance, velocity, angle and angular speed measurements as well as track multiple points to compute and graph in their XY-coordinates, speed or acceleration. The interface can also harmonize this measured data with images.

This section reviews various PCC measurement capabilities. Further documentation, including Step-by-Step procedures can be found in the PCC help documentation available within the software.


### Units of Measurement

Units of Measurement specify the computing and reporting unit for distance, speed, acceleration, angle and angular speed measurements. Establishing a measurement scale is an important first step to using the measurement functions.


Define the Measurement Units in the Preferences menu, accessible by clicking the wrench icon from the Manager tab.

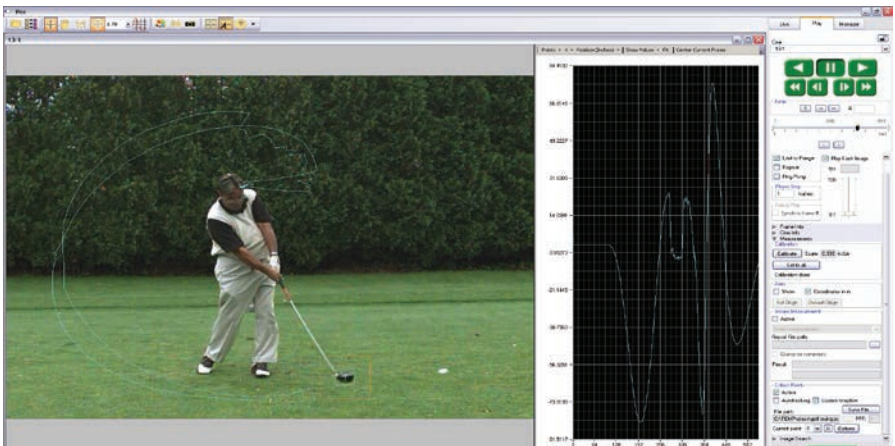

PCC display automatically tracks golf club head to calculate swing speed, path and acceleration.

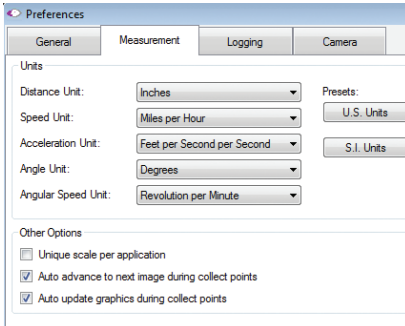

## Measurement Tab

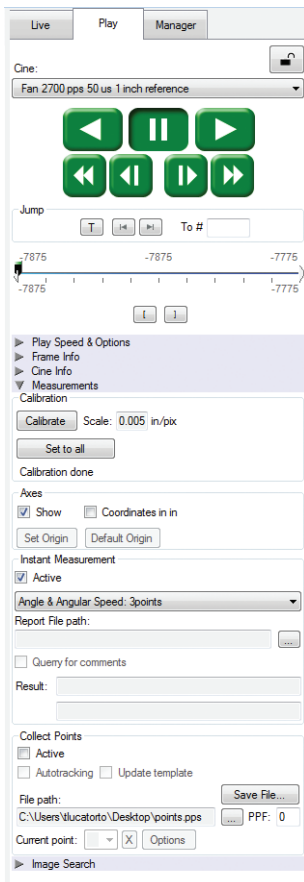

“Other options” in Measurement Preferences:

**Unique Scale per Application:** When enabled the same scale will be applied to all subsequently opened Cines.

**Auto Advance to Next Image during Collect Points:** the Cine advances to the next image automatically once all the collect points have been manually specified on the displayed image. This option should be disabled (unchecked) if auto tracking points is to be used.


**Auto Update Graphics During Collect Points:** A graphical display of the tracked points will overlay the images during the collect point process.

PCC's measurement functions are found in the Play tab and will work with saved files (Cine Raw or converted files) or directly from the camera's RAM playback.

To define a measurement scale, the first step is to use the 'Calibrate' function in the image with a known scale, then specify that scale size. Once created all measurements are computed and displayed using the scale unit.

Coordinate measurements are calculated from an origin point pixel. By default this is the top-left corner of the image however it can be changed when performing measurements. Each coordinate consists of 2 numbers (x,y) indicating the position of a pixel in the image on the two-dimensional plane from the origin point.





Your choice of origin will be largely dependent on the subject and the type of motion being studied.

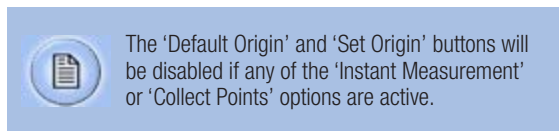

Once the origin point is set, activate 'Instant Measurements' and select one of the available options for Distance, Angle and Speed or Angle and Angular Speed.



## Instant Measurements

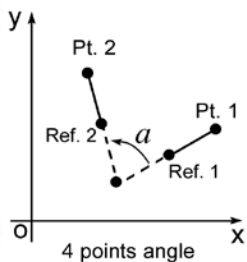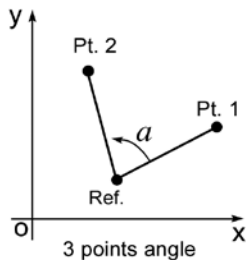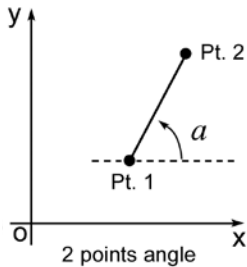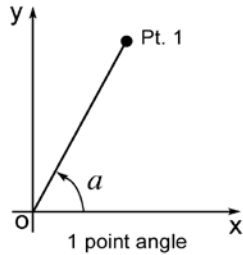

## Collect Points

Instant Measurements consists of four unique motion analysis tasks, including:

1. Distance & Angle & Speed: Origin + 1Point. Used to measure the distance and speed of linear motions with respect to a fixed point of origin, the angle formed with respect to the x-axis, or the speed of a rotational motion (computed with respect to the horizontal axis of the picture screen), when only one point is known.
2. Distance & Angle & Speed: 2Points. Used to measure the dimensions of an object or space, the displacement and speed of an object in one image with respect to its new position in any subsequent image, angular speed (computed with respect to a horizontal axis), or the speed of a rotational motion when two points are known.
3. Angle & Angular Speed: 3Points. Used to measure angles when the vertex and the two end points of the angle are visible.
4. Angle & Angular Speed: 4Points. Used when the vertex or the center point of rotation is unknown or lay outside the image area, the angular speed can be found by comparing the position of an object in one image to its position in the next image.

Each of these are calculated by selecting a point (or points) in one frame, then forwarding the video and selecting the same point (or points) in the subsequent frame. Results are posted in the 'Results' area.

All Instant Measurements can be used in conjunction with a Report File or without. With a report file opened, the image number, elapsed time from trigger, unit of measurement, distance, dimension, speed and comments are automatically saved in the file.

Point data (for up to 99 points-per-image) can be collected, tracked within PCC software and imported by third party programs. This feature creates a separate data file for point coordinates, speed and / or acceleration.

## Collect Point Data for Tracking

The point data can be collected two ways:

1. Manual Track. Used to track point positions (coordinates) from one image to the next once its starting point is defined.
2. Auto Track. Used to track point positions from one image to the next once its starting point is defined.


Auto Tracking is done during the play of the Cine (step forward, step backward, play forward, play reverse). It is very important that the images be in succession; Auto tracking will self-disable if they are not. To avoid this from occurring 'Play Speed & Options>Play each image' is forced on. It will also disable itself when jumping from the last image to the first. However, the points will remain attached to those areas in the image as they are stored in the user-specified '.ppf' (pictures-per-frame) file. This allows the end-user to reopened Cine and / or pictures-per-frame file to overlay the points, or export the file to a spreadsheet.

## Autotracking, Step-by-Step

After the measurement units, calibration scale, and origin point have been defined:

1. Locate the first frame with the points to be tracked.
2. Create a .ppf (picture-per-frame) file by clicking the '...' button near the 'File path' box under 'Collect Points'
3. Navigate to the folder to save the '.ppf' file; enter a name and click on the 'Open' button.
4. Specify the number of points to be collected (tracked) in the 'PPF' field (99 maximum).
5. Enable the 'Active' enable box.
6. Click the center of the point(s) to be tracked. Ideally, the selected points should be a small target or the edge of an object that will be in motion. Do this until all points have been manually specified. If the 'Auto Advance to Next Image During Collect Points' has not been enabled in the 'Preferences>Measurement' tab you will need to advance the file to the next image.

## Define Point Parameters

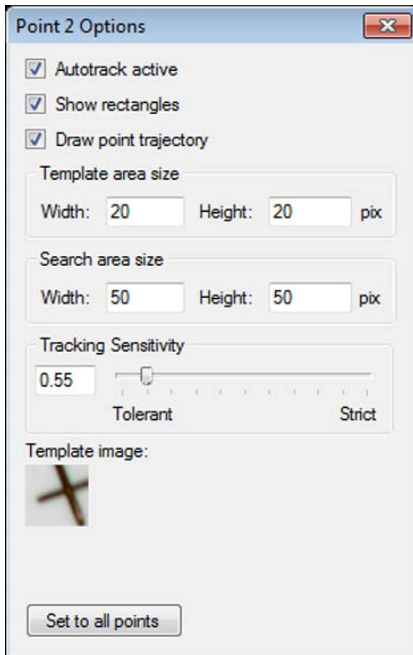

Points used for autotracking can be dedicated markers (crosses, quarter of circles in opposition black-white, white-black) or any objects in image that has something different on two orthogonal directions. The middle of a straight line is not good but an isolated spot, such as the end of a line or a corner are okay.

Once the points are selected, click the 'Current Point/Options' button to further define each point:

**Autotrack Active** - turns on and off the autotracking of the selected point.

**Show Rectangles** - displays the 'Target Area' and 'Search Area' rectangles for the point. The region sizes are defined by the 'Template Area Size' and 'Search Area Size' parameters.

**Draw Point Trajectory** - turns on and off the ability to graph and display the path over the image area.

**Template Area Size** - defines the width and height (in pixels) of the of the 'Template Image' to search for and track. The center of the 'Template Image' was determined when the point was specified.

**Search Area Size** - defines how large of an area in relation to the 'Template Area' to search, in the next image, for point matches. A value equal to the 'Template Area Size' indicates that the tracking algorithm should search in a region the same size. Larger values will result in larger search areas, which will take a longer time to search. Typically these values are set to 2-3 times the size of the initial image template.

**Tracking Sensitivity** - defines the acceptable level of difference between the template and the occurrence in the new image. A strict matching algorithm is used to avoid false matches; however this may lead to more frequent loss of targets during tracking. To compensate for this, you can adjust the 'Tracking Sensitivity' to be more tolerant.

**Template Image** - displays an image of the point used for tracking.


**Set to All Points Button** - used to apply the above settings to all currently defined points.

Once point settings are defined, enable 'Autotracking' to turn the feature on. In the event a 'Template Image' (tracking point) can not be tracked or is lost the 'Autotracking' feature will disable itself.

Optionally, enable (check) 'Update Template' to update (change) the 'Template Image' to the image (point) presently marked by the 'Template Area Size' rectangle. Due to rotations, shadows, etc. the point can be lost. If 'Auto update' is enabled, PCC will attempt to restrict the selective disabling of the feature.

## Graphics

Optionally, click the 'Graphics' toolbar button to view a chart of the tracked points. This opens a graphical interface (displayed to the right of the Cine image). It is used to display signal acquisition information or position/speed/acceleration and the coordinate X or Y of tracked collect points. The displayed values take into account the global measurement preferences for position/speed/acceleration. Only windows for the type of signals that are present in the .Cine file will be available.

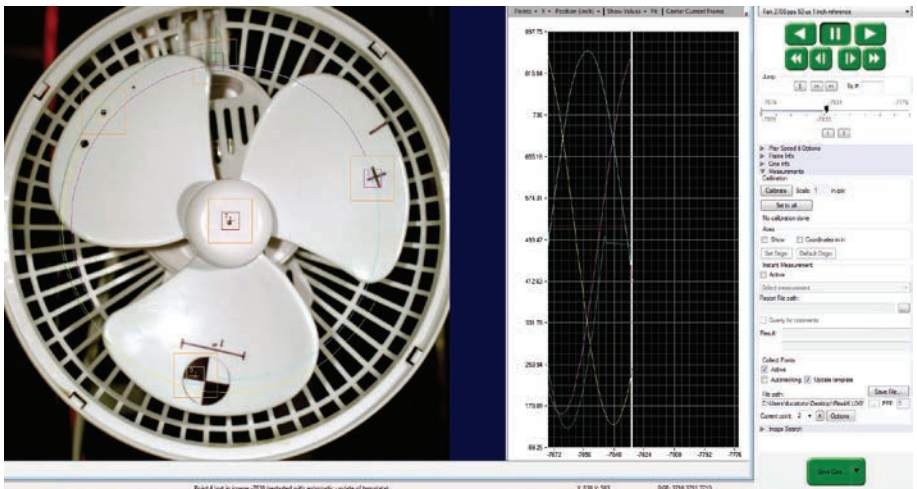

## Finishing Steps

1. Deactivate (un-check) Collect Points.
2. Click the 'Save' button to save the completed points and computation files that are required.

# 9

## Accessories

### Introduction

Phantom VEO cameras ship with a basic set of all that is needed to get started using the camera, including a power supply, Ethernet cable, SDI cable and PCC software.

Vision Research offers several accessories meant to facilitate the use of the VEO for different applications, as the size and shape of the camera make it particularly well suited for different rigging options.

This section includes a list of some of those key accessories. Check the Vision Research webstore at [www.phantomhighspeed.com](http://www.phantomhighspeed.com) or check with your sales representative if you do not find what you are looking for here and for pricing info.

Handle part # VRI-VEO-HANDLE

Cheese plate part # VRI-VEO-CHEESEPLATE

### Handle & Cheeseplate

One of the more common accessories for Phantom VEO is a handle. This basic handle is made by Vision Research and it works with and without the cheese plate, which is also pictured here.

The Cheese plate adds additional mounting points for attaching items like viewfinder and monitor mounts.



Note that the VEO is identical on the top, bottom and right side when it comes to mounting points, so these can be attached to any of those surfaces. This allows the same mounting possibilities when using the camera vertically, for example, or in rigs when the camera is to be used upside-down.

## Cameo Accessories for Phantom VEO

The Cameo line of accessories from Abel Cine includes a cine-riser, cinema style handle, additional cheese plates, battery solutions and more - designed specifically for the VEO. Basically, everything that is needed to facilitate a production-friendly workflow is included. These items are available stand-alone or as a kit, as pictured here.

### Cameo Cine-Style Handle

Cameo handle part # VRI-AB-CAM-VEO-HANDLE  
Requires cheese plate (included)



### VEO Riser

Riser part # VRI-AB-CAM-VEO-RISER

The Riser is an important accessory that brings the VEO's optical axis to the correct height to work with standard bridgeplates and common 35mm film accessories. The riser includes 15mm Rod support for lightweight accessories like lens supports and smaller matteboxes. Requires cheese plate (included)



### Cine Essential Kit for VEO

Kit part # VRI-AB-CAM-VEO-CINE-KIT

The VEO essential kit includes a top handle, riser, rosette bar and 2 cheese plates.



## Battery Solutions

### 24V & 12V Power Input

### 12V XLR4 Power Input Cable



### 12V Battery Mounts



### Phantom VEO 640S

Pictured with Cine Essential Kit and on-board 12V Anton Bauer Gold mount. Lens, Matte Box and Rods are not included.



With the addition of a battery mount and an on-camera monitor or viewfinder, a VEO S-model camera becomes a fully portable high speed camera system.

A VEO running with its maximum configuration will consume approximately 70 watts of power.

The camera's main power input is 24V (16-28V range). An XLR3 battery cable exists for connecting an off-board 24V battery: Part# VRI-CBL-VEO-BATT-2

VEO-S models include a capture port which offers an alternative 12V power input. When working with batteries in the 12-14.4V range, ensure the battery can supply at least 8 Amps when fully charged.

There are a few different 12V battery mount solutions to choose from, each of which connect to the camera's capture connector.

Part # VRI-CBL-VEO-S-12VBATT-0R2

This short 10-inch XLR4 is meant for connecting 12V battery mounts (with an XLR lead), or connect a 4-pin XLR extension cable for using other 12V power sources.

Alternatively, choose a battery mount customized to work directly with the VEO.

Part # VRI-VEO-BATT-MNT-AB (Gold mount)

Part # VRI-VEO-BATT-MNT-VLOCK (V-Lock mount)

These mounts work with one of the Cameo cheese plates, which are included with the mount, and the cable connects directly to the capture port of the VEO. The recommended position is on the side of the camera, as shown.



## Viewfinder and Monitor Options



Phantom VEO cameras come standard with an SDI Din, HDMI and a 4-pin Hirose 12V VF Power output, which supports small, low power monitors and viewfinders. The VF output is specified for devices up to 0.9 amp (10W when the camera is running from a 12V power source). Larger, higher power devices must be powered from a separate source.

Vision Research offers a few different VF power cables for on-camera monitors including:

Hirose to 2-pin Lemo. This is for monitors and viewfinders with a 2-pin Lemo input.

Hirose to XLR4 15 inch cable. This is for monitors with a 4-pin XLR input for power.



VEO cameras ship standard with a 12 inch SDI Din port which is perfect for on-camera SDI monitors and viewfinders, like the one pictured at left. This is included in the camera's ship kit.

## Recommended Viewfinder



Zacuto's Gratical Eye Viewfinder is a great eyepiece solution for the Phantom VEO. It features a high quality OLED display, intuitive menu system and is small and lightweight.

Vision Research offers a kit that includes a viewfinder bracket and the necessary cables to connect the Gratical Eye to Phantom VEO cameras.

Part # VRI-ZACUTO-VF-EYE-KIT



## Lens mounts

A Phantom VEO ships with the lens mount of your choosing. There are four mounts available, pictured below and in order, clockwise from top left:



Phantom VEO cameras and Phantom midsize-Miro model cameras use exactly the same lens mounts.



### Nikon F-Mount

The Nikon mount is compatible with both manual F-mount and newer G-style lenses. A mechanical lever on the front of the mount allows for manual adjustment of the aperture on G-style lenses.

### Canon EF-Mount

The Canon mount works with electronic Canon EOS lenses and allows for control of aperture (on-camera and in software or remote control) and focus (in software or remote control). While most Canon lenses are supported, it is a good idea to check that your lens has been verified on the Vision Research website [www.phantomhighspeed.com](http://www.phantomhighspeed.com). Verified lenses can be found in the FAQs in the support section of the website.

### PL-Mount

A standard 35mm PL mount for compatibility with a wide array of manual cinema PL lenses.

### C-Mount

A C-mount is often required for specialized optics such as microscope mounts for scientific imaging or small rugged lenses for crash test applications.

### VEO OLPF

There is an optical low pass filter available (OLPF) for color VEO 340 and 640 camera models. This OLPF is designed for a 10-micron pixel and exists to reduce aliasing caused by the bayer pattern of the sensor. It is recommended for cinema applications.

Part # VRI-VEO-X40-OLPF-BG

## Installing a Lens Mount

Installing a new lens mount is simple. Remove the four M2.5 screws that are attaching the current lens mount. Ensure all shims that are behind the mount are transferred to the new mount.

In the case of the Canon mount, ensure the camera is powered down and carefully align the pins to the plug found behind the mount. Once lined up, use the same screws to fasten the new mount in place.



Any time the lens mount is removed it's important to verify the back focus. A set of extra lens mount shims is included with every VEO lens mount in order to adjust the camera's back focus when necessary.

## CFast Cards and Reader

Part #s

VRI-CFAST-128: A 128G x3600 CFast 2.0 card

VRI-CFAST-256: A 256G x3600 CFast 2.0 card

VRI-CFAST-READER-USB3: A simple USB3 reader for CFast 2.0 cards.

Phantom VEO S-model cameras include compatibility with CFast 2.0 cards. It is important that the cards are specified as CFast 2.0. At the time of writing, Vision Research has verified the Lexar x3600 series cards.

VEO cameras require the card to be formatted for the NTFS file system. More information about formatting the cards and working with CFast cards can be found in Chapter 5 of this manual.



## Transport Case



The popular Pelican 1510 case is the perfect size for a Phantom VEO camera and a set of accessories. Vision Research offers this case with custom foam that includes space for the camera body, with or without handle and cheese plate, plus the cable kit, small monitor, and a few extras such as lens mounts or battery mounts. It is a very convenient size with wheels and a handle.

Case dimensions: 22.0 x 13.8 x 9.0"  
(55.9 x 35.1 x 22.9 cm)

Part numbers:



VRI-CASE-VEO (black)

VRI-CASE-VEO-TAN (desert tan color)

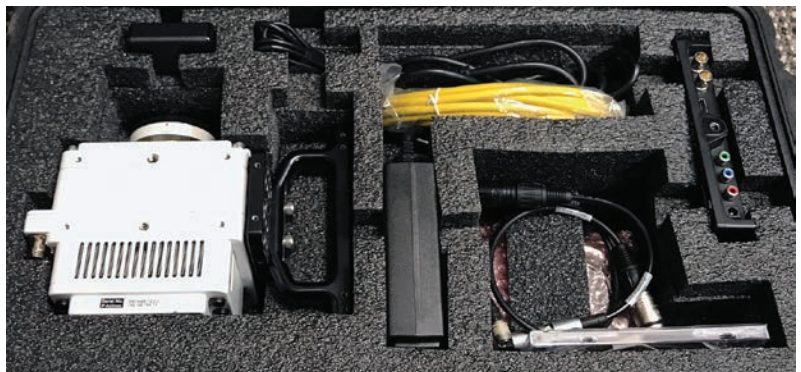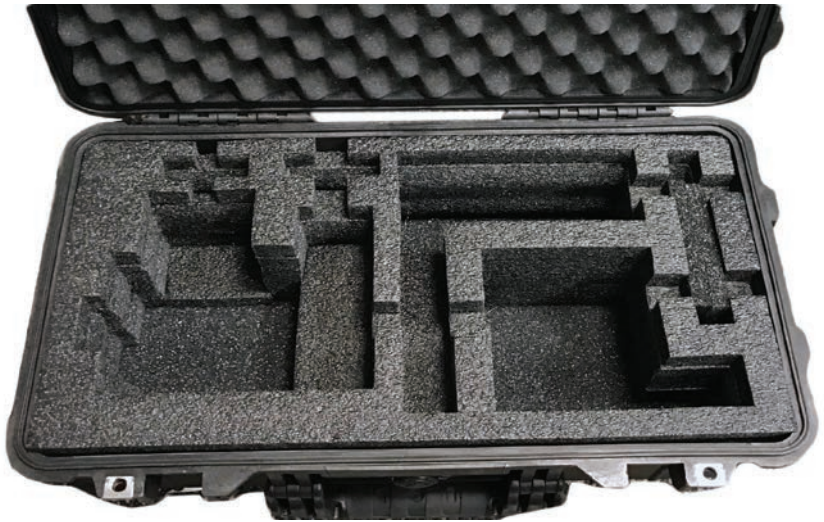

# mechanical drawings


VEO S-model  
Front/Back

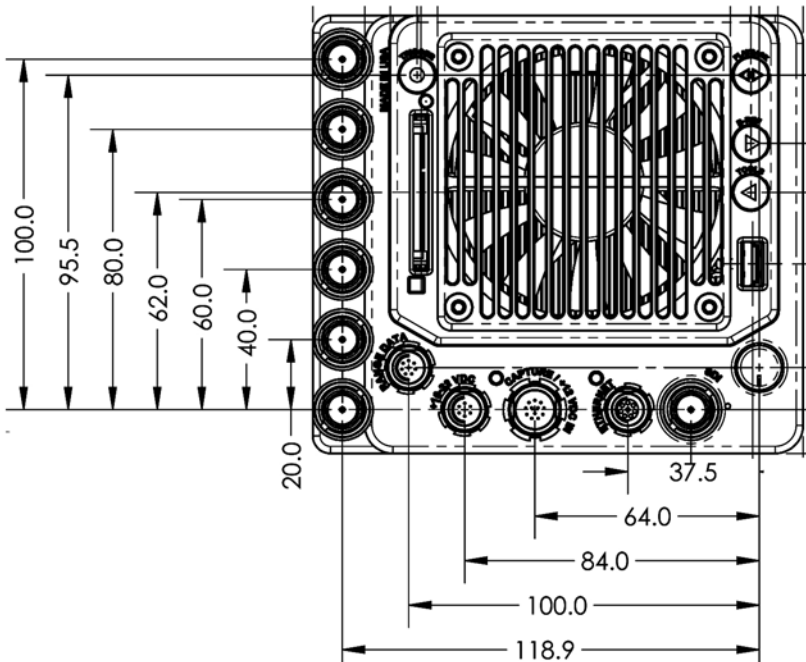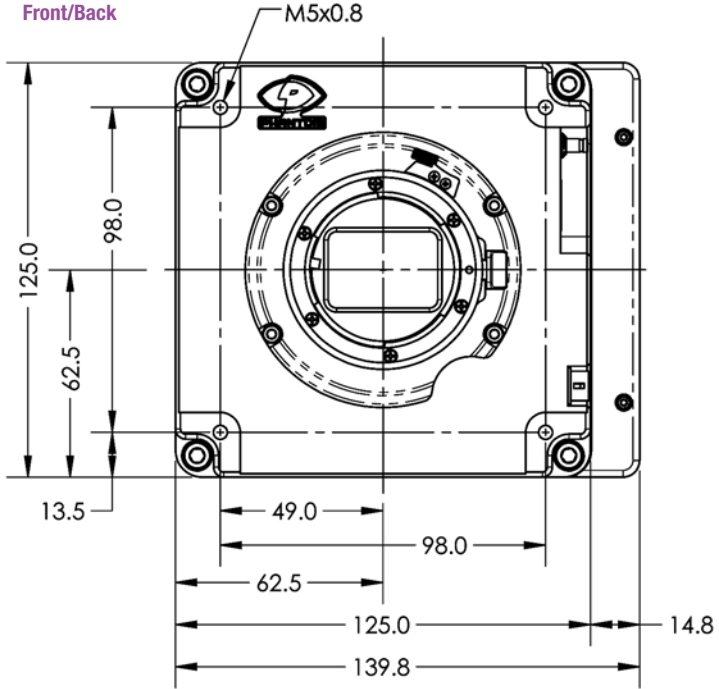



# 10


## Support

VEO S-model  
Top/Bottom

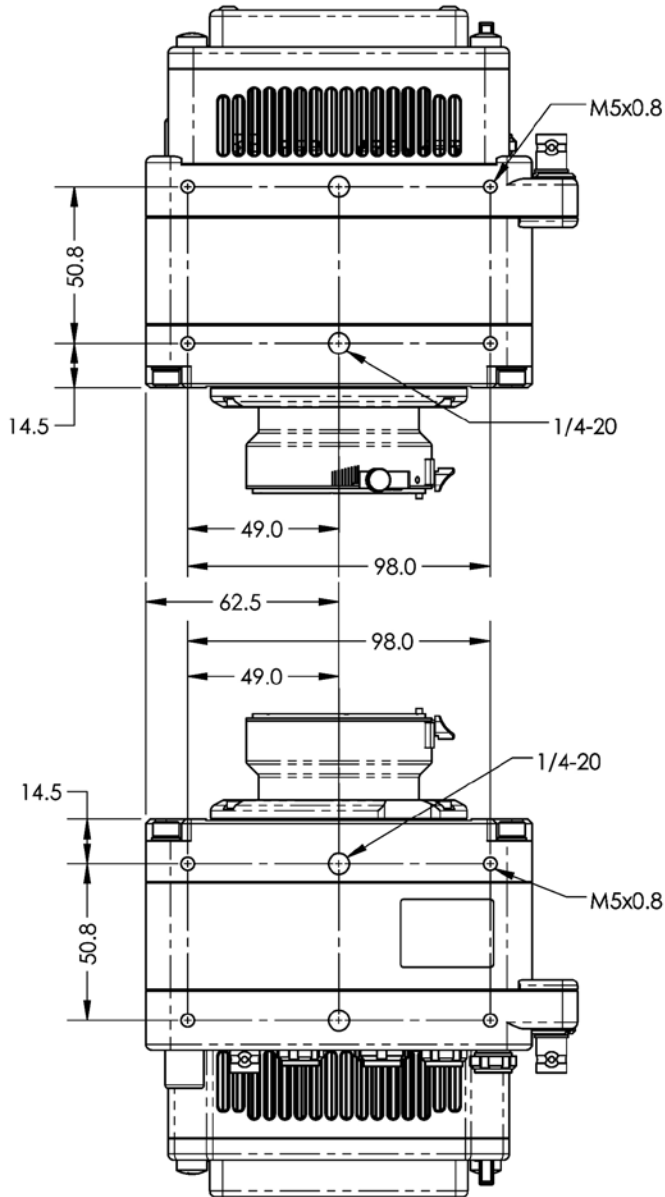


VEO S-model  
Left/Right

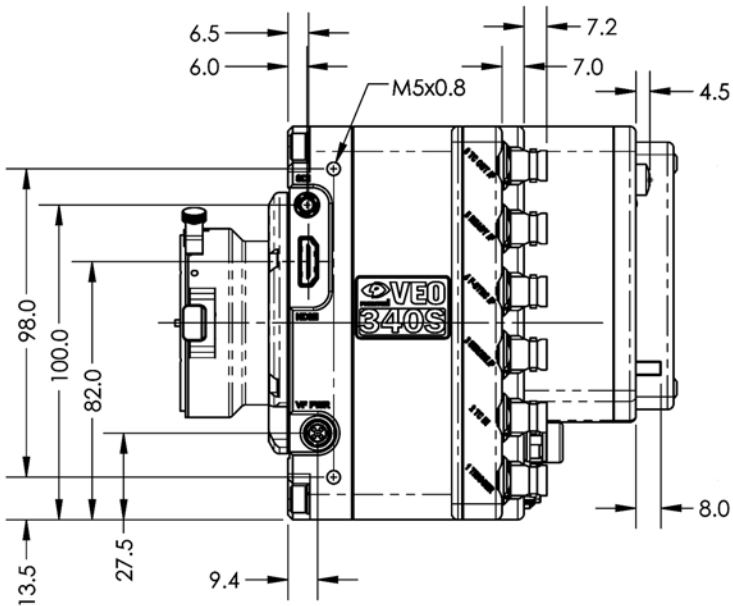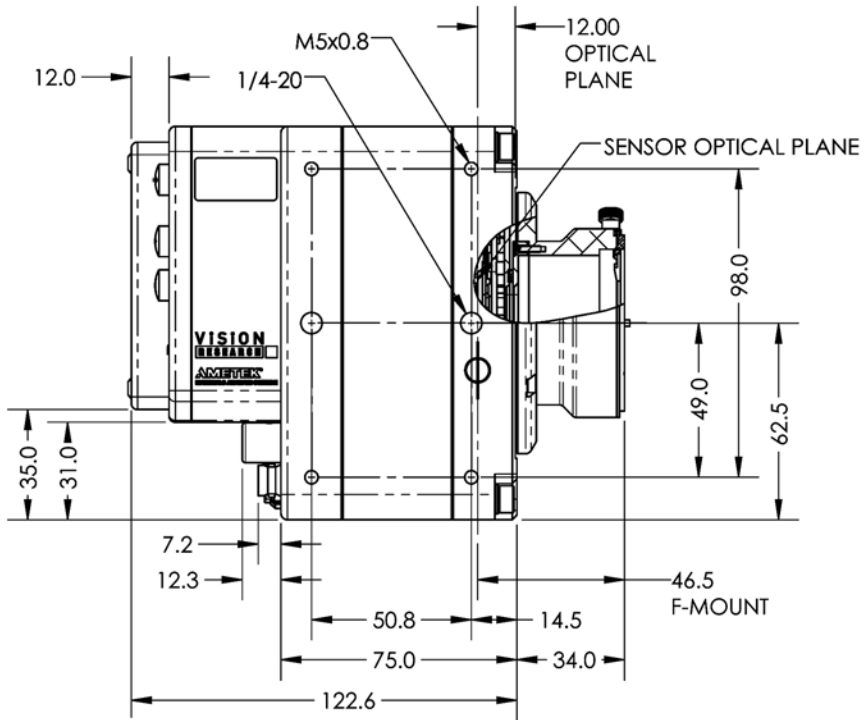

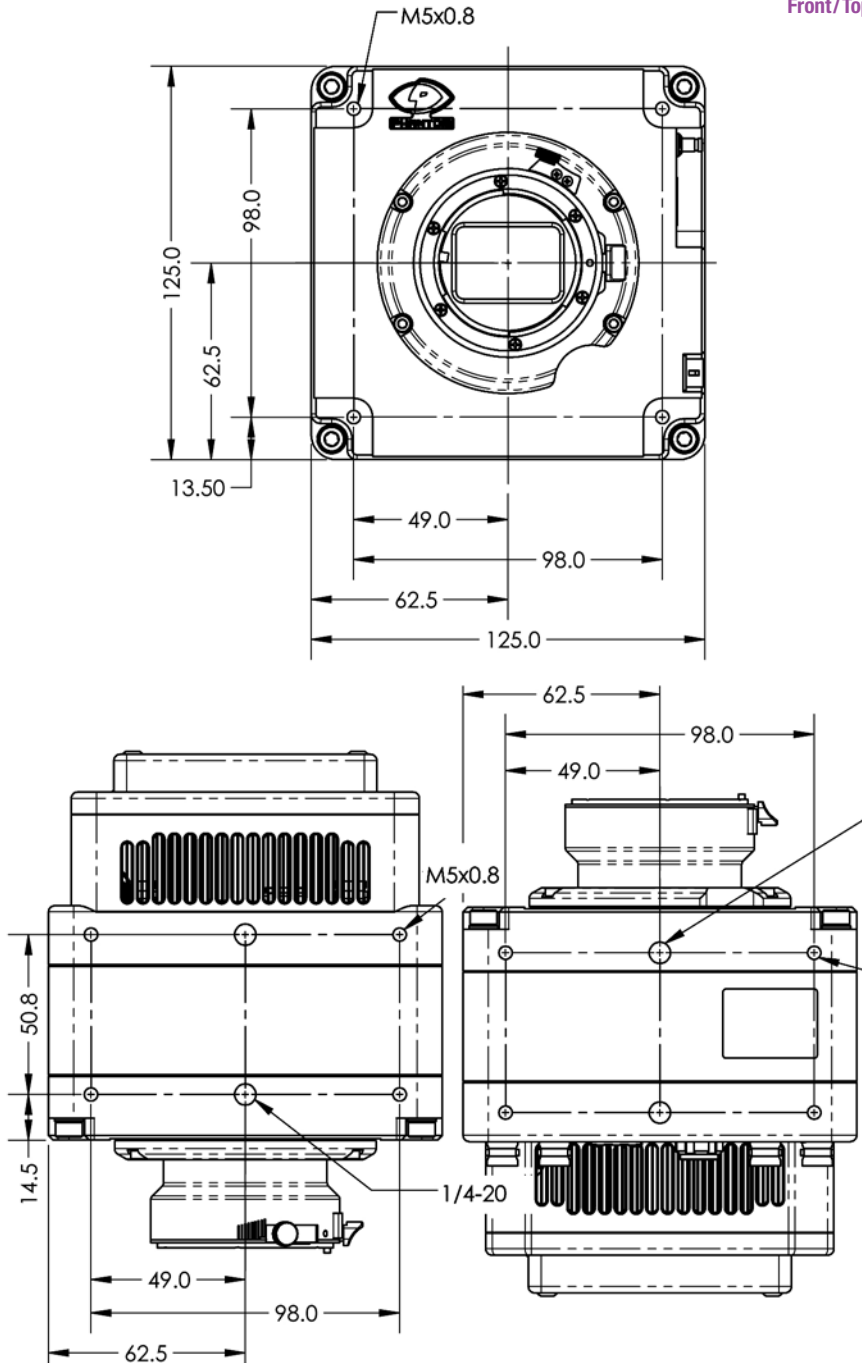

VEO L-model  
Side/Back

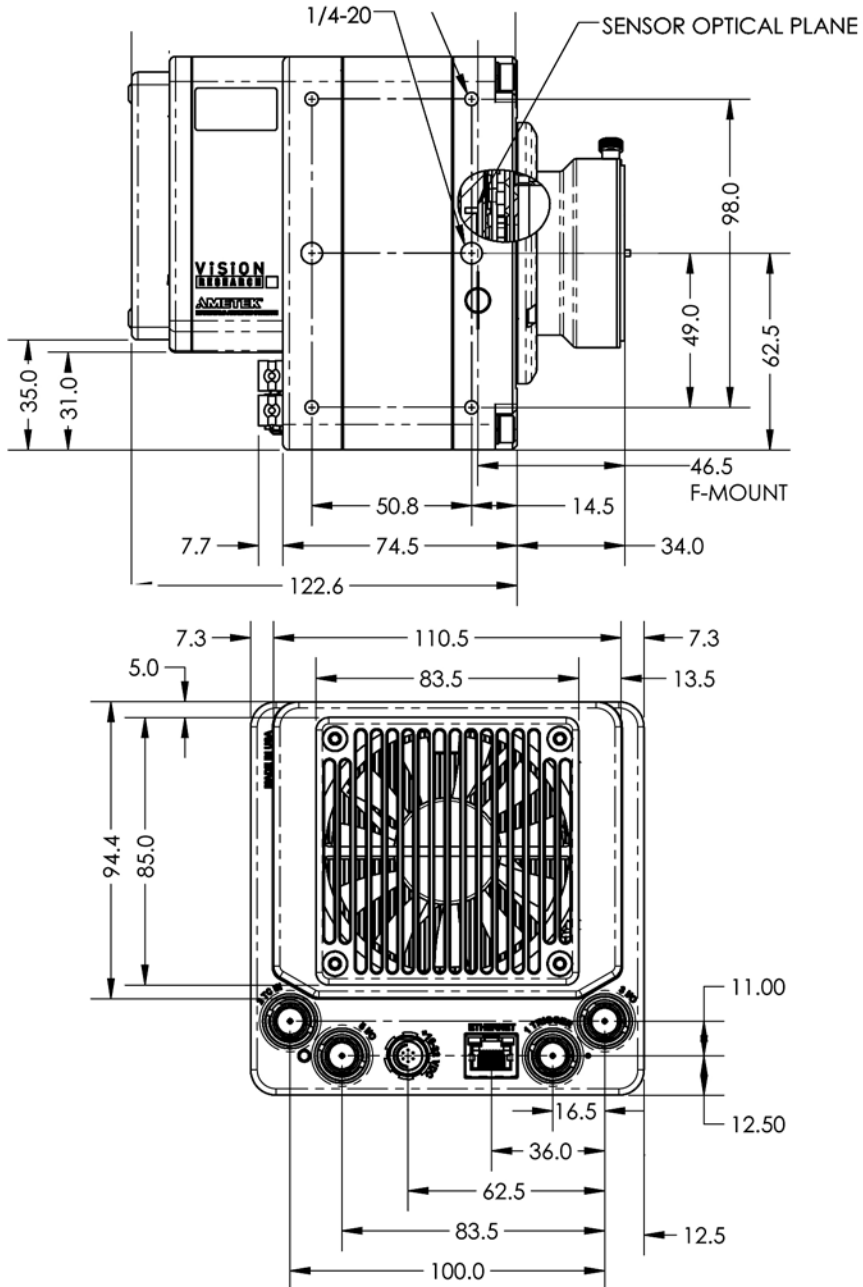



# connector pin outs



Use these schematics to build custom cables at your own risk. Mis-wired cables can cause serious damage to the camera, which is not covered under warranty. Vision Research recommends only using cables supplied by Vision Research.



These pin-out diagrams refer to the connector on the camera body. Part numbers indicated are for the cable's connector.

## 6-Pin Power +16-28VDC (Male)



Main power port. VEO S and L models  
6-pin Fischer part # SS 103 Z 056 1300

PIN	NOMENCLATURE / FUNCTION
1	PGND / Power Ground
2	VDC +16-28 VDC (Direct Current)
3	RxD1 / RS-232 Receive Data 1
4	TxD1 / RS-232 Transmit Data 1
5	UNUSED
6	GND / Ground

## 4-pin 12V Viewfinder Power (Female)



12V Viewfinder power. VEO S and L models  
4-pin Hirose part # HR10A-7P-4P

PIN	NOMENCLATURE / FUNCTION
1	GND Chassis Ground
2	RTALLY Red Tally
3	GTALLY Green Tally
4	+12 VDC / up to 1.5 Amps

## 8-pin Ethernet (Female)



Ethernet port. VEO S models only  
8-pin Fischer part # S-103-A-058-130

PIN	NOMENCLATURE / FUNCTION
1	ETHRXP 10/100/1000 Base-T Ethernet Receive Positive
2	ETHRXN Ethernet Receive Negative
3	ETHTXP Ethernet Transmit Positive
4	ETHTXN Ethernet Transmit Negative
5	MDI2P Media Dependent 2 Positive
6	MDI2N Media Dependent 2 Negative
7	MDI3P Media Dependent 3 Positive
8	MDI3N Media Dependent 3 Negative

## 8-pin Range Data (Male)



Range Data port. VEO S models only  
8-pin Fischer part# S103Z05813

PIN	NOMENCLATURE / FUNCTION
1	GND / Power Ground
2	ROUT+ / Remote/Range Data Out (Positive), (RS-422); +5V maximum. Depending on data transmission rates, RS-422*
3	ROUT- / Remote/Range Data Out (Negative), (RS-422);
4	+5V maximum. Depending on data transmission rates
5	RS-422
6	RIN+ / Remote/Range Data In (Positive), (RS-422); +5V maximum. Depending on data transmission rates, RS-422
7	RIN- / Remote/Range Data In (Negative), (RS-422); +5V maximum. Depending on data transmission rates, RS-422
	+3V3R
	+24VR
	GND / Power Ground

\* RS-422 up to 4,000 feet (1,275 meters).

## 12-pin Capture (Male)



Capture port for optional mini-bob and 12V power input  
VEO S-models only

12-pin Fischer part # S-1031-Z012-130

PIN	NOMENCLATURE / FUNCTION
1	I0GND Signal ground
2	I0GND Signal ground
3	I0GND Signal ground
4	TRIGGER Isolated Input. Active low. Can be activated by a switch to ground. Pulse must be at least 3 microseconds long.
5	P/I0 5 (Programmable) default signal is READY
6	P/I0 6 (Programmable) default signal is STROBE
7	TCIN Timecode Input can accept IRIG-B and SMPTE standards
8	GND
9	TCIN Timecode Input can accept IRIG-B and SMPTE standards
10	POWER / Nominal power supply voltage is +24VDC (acceptable range is 12-36VDC)
11	POWER / (see Pin 10)
12	P/I0 6 (Programmable) default signal is TIMECODE OUT

### How long can the camera record?

The record time is completely dependent on the camera's resolution, frame rate, and the size of memory that is being recorded to. For example, a 36GB VEO 710 will record 3.2 seconds of real time at its top frame rate of 7400 fps at full 1 megapixel resolution. This 3.2 second clip will play back extended over 6 minutes with a 60p playback rate.

A record time calculator is available at [www.phantomhighspeed.com/calc](http://www.phantomhighspeed.com/calc) or in our Phantom Tools iPhone app.

### How is the light sensitivity determined?

We test our cameras' light sensitivity to an industry standard: ISO 12232. We use the SAT method which we think is the best method for determining a sensor's sensitivity. The SAT method does not use gain to boost sensitivity. When using gain to increase sensitivity, you also boost the noise level. Note that a gain adjustment, and other image processing tools to boost sensitivity are available on all Phantom cameras.

### How does Exposure Index work?

Phantom VEO cameras are the second Phantom camera model to incorporate the Exposure Index function - the Flex4K was the first. Exposure Index can be thought of as "apparent ISO" for use when determining exposure and lighting.

The way it works is that a pre-defined tone curve is applied to the image which boosts the signal in a non-linear way in order to get the most out of the sensor's inherent dynamic range.

The exposure index (EI) range always starts at the camera's base ISO level and goes up from there. Just like any digital camera, the higher the value, the more noise - however overall image degradation is noticeably less than when compared to a linear gain adjustment.

The highest pre-set EI setting has been selected to ensure image quality looks good throughout the range. Additional image processing can be added beyond that pre-set. This produces a "Combined EI" value which is shown on the camera's on-screen-display (OSD) and in PCC software. The combined EI is what should be used for lighting and exposure calculations.

## **What is a Current Session Reference (CSR) and When should I use it?**

Phantom cameras employ CMOS sensors, which are made up of thousands of pixels whose sensitivity can drift due to changes in resolution, exposure, time and temperature. A Current Session Reference calibrates all the pixels that will be used for a given set of camera parameters. It is usually good practice to perform a CSR anytime a change is made in camera settings or lighting. This ensures that the camera sensor will deliver the best possible picture available.

Phantom VEO cameras include a built in mechanical shutter that automatically closes during the CSR, which only takes a second. Auto-BREF can be set in the software, or via the on-camera menu, so that whenever the camera enters capture mode it will close the shutter and do the CSR. This is a good safety precaution to ensure the best image throughout the day despite changing recording parameters and conditions.

## **What remote control options are there for VEO?**

The Phantom RCU has not been updated to work with VEO, and therefore is not recommended at this time. However if one were to have an RCU with appropriate cables, it would still control the basic capture, trigger and save functions, so it is not unsupported all together.

In order to connect the RCU to the VEO, the Miro RCU connection kit must be used, which includes a “Y-cable” that breaks out the cable connection from the camera’s power port. There is no remote bluetooth solution at this time.

Another control option is the Phantom PCU, which works with many different Phantom camera models and is manufactured by Abel Cine.

## **Is there a Junction box for VEO?**

The current Junction box is the Miro-JB, which does not work with the VEO due to power limitations. In order to synchronize cameras, each camera must be powered separately and F-Sync should be used from one camera to the next.

Remember, when synchronizing in this way, the timecode from the master camera to the slave cameras should be connected in order for the time code to also match.

**What video modes are supported?  
Does the VEO support  
NTSC/PAL video?**

**How long does it take  
to save from the camera  
vs from the CFast card?**

The SDI and HDMI outputs found on all Phantom VEO cameras are 3G and support the common 720p and 1080p 3G signals. The camera supports:

- 4:2:2 1.5G 1080p/psf/i at 23.9, 24, 25, 29.9 Hz; 720p at 50, 59.9 Hz
- 4:2:2 3G 1080p 50 and 59.9 Hz

VEO cameras do not also include NTSC or PAL video outputs.

The time it takes to download Cine files over Gb Ethernet is highly dependent on the computer system and the hard drive being used. For example, a solid state drive will always achieve higher rates than traditional hard drives. Whether saving from RAM or the CFast 2.0 card using PCC software, the download rate is very similar. On an optimized system it is possible to achieve 70-80 MB/second.

The save rate from RAM to CFast 2.0 is approximately 90 MB/second. An entire 72GB RAM cine file will take approximately 12 minutes to complete the save. It is always recommended to review the shot and set in and out points prior to beginning the save to optimize time and card space.

It is true that CFast is capable of faster data throughput. The main reason the VEO bandwidth is limited is due to the in-camera processing required to convert raw data to a wrapped Cine file.

It is worth noting that the save time from the CFast 2.0 card using a reader (whether USB3 or Thunderbolt) is typically much faster.

**There are fixed black spots on the image, particularly at small apertures.**

**The camera keeps switching back to LIVE in PCC when trying to playback via the camera controls**

**The live images look scrambled and the frame rate can't be set**

**Restoring the factory defaults**

This is most likely caused by dust particles stuck on the sensor or OLPF (optical low pass filter) surface. The best way to check is to remove the lens and look at the glass surface with a bright light source. Vision research recommends not to use canned air to clean the sensor surface. It is safer to use a manual bulb-style air blower and/or sensor cleaning brush for removing loose dust particles.

Additional tips for cleaning sensors can be found in the maintenance section of this manual.

If you have the Phantom Video Player software open and it's set to LIVE, this will cause the camera to switch back to LIVE mode when trying to playback. All Phantom software should be closed for playback to work reliably when using the camera controls.

If the image is non-responsive and scrambled, the camera may be set to an external sync without a sync source connected. Check the Sync setting (advanced settings in PCC, or via the on-camera control menu) to ensure that 'Internal' is selected.

If the camera is stuck in an unusual state it may be useful to restore the camera's factory defaults. This returns the capture parameters, image processing, video modes, and image calibration back to the original settings.

Factory Defaults can be set in the Nucleus program within PCC, or via the 'Settings' menu of the OCC. Select 'Factory defaults' / 'OK'. It will take approximately 20 seconds for the camera to return to an operational state.

## Sensor & OLPF Cleaning Technical Tips

- Sensor cleaning should only be attempted by experienced imaging professionals.
- Use a small, but powerful flashlight to look at the sensor and filter, it's easier to spot the dust.
- The OLPF assembly is removable and located in front of the sensor. Once the lens mount is uninstalled the OLPF can be easily removed (2 screws) for cleaning.
- Sensor cleaning must be done in a clean and controlled environment
- Always have a forced-air bulb style blower and a clean sensor cloth handy for more serious dirt.
- Sensor cleaning solution (like Eclipse) should only be used if absolutely necessary, and applied with a soft wipe intended for sensor cleaning.
- Cotton swabs aren't a good idea, unless they are wrapped in a sensor wipe material. They leave behind more than they remove.
- Never use your finger to get a speck of dust off, it's going to make things much worse.
- Never blow on the sensor or OLPF.
- Never put sharp objects near the surface of the OLPF or sensor.
- Always keep the Phantom body cap on the camera when there is no lens attached.

## Back Focus Adjustment

Due to differences in various lenses and other mechanical tolerances it may be necessary to adjust the lens mount on the camera to obtain proper focus. In most cases, changing a lens or replacing a mount will not require adjusting the back focus, though it should be verified. When the focus distance marks on a lens do not match the measured distance between the sensor & subject, it indicates the need to adjust the back focus.

By adjusting the back focus, you are changing the distance of between the flange and the sensor plane. Shims are included to assist in both slight and coarse backfocus adjustments.



## Global Headquarters

Vision Research, Inc. - Wayne, New Jersey

100 Dey Road  
Wayne, New Jersey 07470 USA

T: +1.973.696.4500

For answers to most questions, please visit us at: [www.phantomhighspeed.com](http://www.phantomhighspeed.com) and search the camera product pages, tutorials, support knowledgebase, FAQs and visit the Phantom Zone - an online community of Phantom camera users.

## Submitting a Support Ticket

For general product, account, order / RMA status inquires and other non-technical questions please e-mail us at:

[customer.support@visionresearch.com](mailto:customer.support@visionresearch.com)

For technical product support, product operation or applications support please e-mail us at: [technical.support@visionresearch.com](mailto:technical.support@visionresearch.com)

## Live Customer and Technical Support

Serving the Americas:

M-F 8:00 AM to 5:00 PM EST (GMT-4:00)

T: +1.973.696.4500

Customer Support, extension 4002  
Technical Support, extension 4003

Serving Europe, the Middle East and Africa:

M-F 9:00 AM to 6:00 PM GMT +3:00

Vision Research, Inc. - Bucharest, Romania

T: +40 21 210 8587

Serving Asia Pacific

M-F 8:00 AM to 5:00 PM GMT +8:00

Vision Research, Inc. - Shanghai, China

T: 86-21- 58685111, ext:141



## CE - 2016

Phantom VEO products are in compliance with the requirements of the Low Voltage Directive (LVD) 2014/35/EU, the Electromagnetic Compatibility (EMC) Directive 2014/30/EU and the Federal Communications Commission (FCC) CFR 47, Part 15 at the time of product manufacture and carries the CE-marking.

CE Declaration of Conformity can be found online at [www.phantomhighspeed.com/Service-Support/Documents/General-Documents](http://www.phantomhighspeed.com/Service-Support/Documents/General-Documents)



## KC - 2016

Vision Research

Approval Issue: November 2016

Country of Origin : USA

MSIP-REM-VRi-Phantom-VEO-L

For models: VEO-710L, VEO-640L, VEO410L and VEO340L

MSIP-REM-VRi-Phantom-VEO-S

For models: VEO-710S, VEO-640S, VEO410S and VEO340S

For Class B devices:

이 기기는 가정용(B급) 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

Translation: Class B device (Broadcasting Communication Device for Home Use): This device obtained EMC registration mainly for home use (Class B) and may be used in all areas.

## KC Mark Location





[www.phantomhighspeed.com](http://www.phantomhighspeed.com)

Vision Research - Corporate Headquarters  
100 Dey Road  
Wayne, New Jersey 07470  
USA  
Ph: +1.973.696.4500  
Fax: +1.973.696.0560